




## INSTALLATION INSTRUCTIONS

# SR-L SERIES MARINE LIGHT BAR

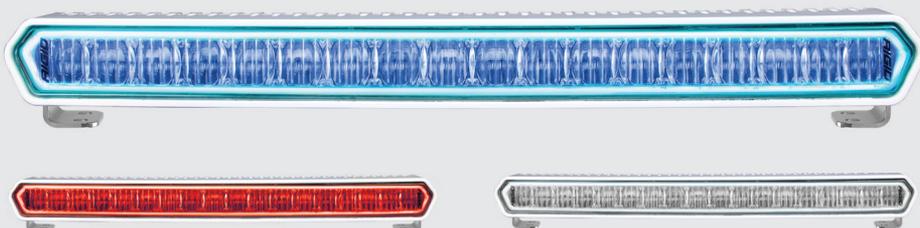

**\*THESE INSTRUCTIONS ARE FOR THE FOLLOWING LIGHTS:  
SR-L SERIES MARINE LIGHT BAR**

### **IMPORTANT**

**THANK YOU FOR PURCHASING RIGID INDUSTRIES' PRODUCTS FOR YOUR VEHICLE.**  
Please read through all of these Instructions and tips before proceeding with the installation.  
We do our best to provide a simple installation process for all applications however  
a professional installation is always recommended.

**Always disconnect any power sources connected to your vehicle  
before servicing fuses or electrical systems.**


# MOUNTING INSTRUCTIONS

## STEP 1

Insert mount bushing into the back of your light bar as shown

See Figure 1

FIGURE 1

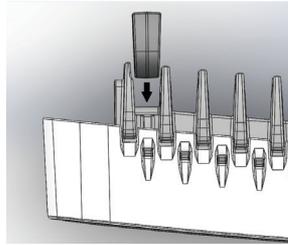


## STEP 2

Align nylon washer with mounting holes as shown

See Figure 2

FIGURE 2

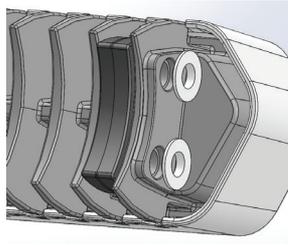


## STEP 3

Mount intermediate plate with provided hardware as shown. Note: intermediate plate is mounted to your light bar using the longer bolts in your hardware kit.

See Figure 3

FIGURE 3

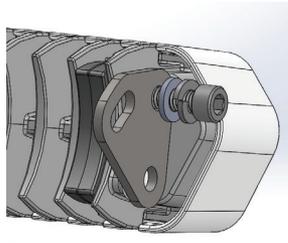


## STEP 4


Mount L-bracket to intermediate plate as shown using provided hardware. Note: nylock nut is used on the shorter bolts in your hardware kit

See Figure 4

FIGURE 4

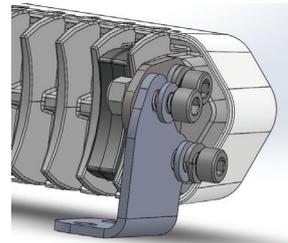

## WIRING INSTRUCTIONS

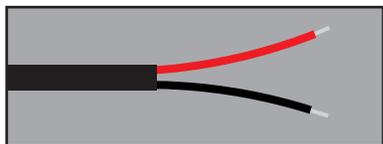

RED WIRE = POWER

BLACK WIRE = GROUND

### IMPORTANT

**Always disconnect the vehicle battery terminals before servicing the electrical system**

1. If connecting to existing wiring the provided wiring adapter can be used. Make sure to use appropriate fusing and wire gauge along with heat shrink tubing on all connections to ensure a weather tight seal.
2. Be aware of the current rating of your selected switch, if switch rating is less than the amperage required to power your light then a relay must be added in line to prevent failure of switch.
3. Use wire sheathing to protect the wire if routing through any metal surface or around any sharp edges.
4. Re-connect the negative battery terminal and fully tighten all mounting hardware. Test to verify functionality.

## FUNCTIONALITY

The SR-L Series Marine LED light bar has 3 modes: high power, low power, and halo only mode. To switch between these modes simply toggle the power on then off. Each toggle of the power will produce one of the three modes.

Note: When turned on, both high power and low power modes will slowly increase to full intensity over a period of about 4 seconds. This is intentional and allows the users eyes to adjust to the glare.

**Your installation is now complete.  
Welcome to the Rigid Nation!**

---

---

## **WARRANTY INFORMATION**

For warranty information, visit [www.rigidindustries.com/about/warranty](http://www.rigidindustries.com/about/warranty)

779 N Colorado St, Gilbert, AZ 85233 • 855-760-5337  
[www.rigidindustries.com](http://www.rigidindustries.com)

RIGID, SL-Series and Rigid Industries are registered and/or common law marks owned by JST Performance, LLC, a Delaware limited liability company d/b/a Rigid Industries.

11-13688-A