Install Instructions

PRP Seats 2019+ Sprinter Van Seat Covers Installation



Parts

A.





Read through all of the instructions completely before beginning the install.

Parts Included:

A. Seat Covers

- 1 x Driver Top Cover
- 1 x Driver Bottom Cover
- 1 x Passenger Top Cover
- 1 x Passenger Bottom Cover
- 2 x Head Rest Covers
- 2 x Arm Rest Covers

C.





Tools Needed: (not included)

5mm Allen Wrench Flat Head Screwdriver Wide Nose Pliers

 
Time:

Approx 2 Hours.



Install Instructions for Sprinter Van Seat Covers



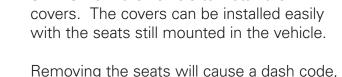

 WARNING - DO NOT REMOVE THE SEATS from the vehicle to install the

Removing the seats will cause a dash code, and require the vehicle to be taken to the dealership to clear it.

Tip - You can swivel the seat around to make install easier.



2. Installation on the driver and passenger seats are going to be almost exactly the same.

Start by removing the headrest. Press on the headrest release button and pull the headrest completely off the seat.



3. Next remove the armrest on the side of the seat. Use a Flat Head Screwdriver to remove the plastic cover. Then use a 5mm Allen wrench to remove the bolt, and pull off the armrest. (This may take some force to do as the armrests tend to get tweaked over time and use).



4. Top Cover Install

Grab the top section of your PRP Front Cover, and make sure that the air bag cut-out is on the side facing the door. Start to slide the seat cover down and over the top of the seat.



Install Instructions for Sprinter Van Seat Covers




5. On the top of the seat, you will need to push the plastic headrest slots through the holes in the cover. Push one corner of the hole underneath the plastic, then work your way around and push the cover under the other 3 corners until the plastic sits flush on top of the cover.



6. On the sides of the seat, push the cover under/behind the seat plastic seat adjusters to that the cover material sits flat and isnt bunched up.

Make sure that the hole in the cover for the armrest on side of the seat the lines up correctly.

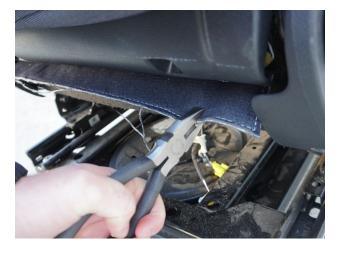

7. On the front side, push the flap on the bottom of the cover through the center of the seat.

Then on the back of the seat, pull this flap through and pull it tight. (Tip - Use wide nose pliers to pull the flap extra tight).



8. Remove the felt strips covering the hook&loop strips, then connect the back flap of the cover to the center flap that you just pushed through. Try to get these as tight as possible to ensure a tight fitting cover.

Go back on the front of the cover to check fitment. You can push and pull the cover around to make sure that its fitting snug, tight, and where it should be. You can readjust and tighten the back flaps if needed.











9. The airbag slot on the shoulder has a mesh liner that needs to be tucked underneath the vinyl, so that it sits flat on the front of the seat. Start at the top, and use your hands to tuck this mesh into & under the cover.

NOTE - Make sure the mesh lies flat on the seat to ensure that the airbag will open properly in the case of an accident.

10. Bottom Cover Install

Start by pulling handle on the leg-rest to extend it, then place the bottom cover onto the seat (both bottom covers are the same).

At the front of the PRP cover there is a band of material that must be pulled over the front of the seat, and underneath the leg-rest.

11. Then start to put on the cover for the legrest. We found it easier to get both back corners on first, then pull and put on the front corners.

The front of the cover has a slot with an elastic band. Slide the plastic release handle into this slot, so it sits over the top of the cover.

Adjust and pull the cover around on the legrest so that it fits snug and tight.





Page 4 of 7











12. Pull the rest of the bottom cover back and start to attach it to the seat. Push the side edges of the cover down and underneath the plastic trim.

Push the back flap though the back of the seat.

Tip - You can rotate the seat around on the pedestal to get better access.

13. On both back corners of the cover there is a drawstring. Feed this drawstring inbetween the seat cushion and the plastic, so that it drops out the bottom of the seat.

Then tuck the sides and back corners of the cover underneath the plastic trim.

14. Then tuck the sides and back corners of the cover underneath the plastic trim.

Pull the draw strings to the back of the seat, making sure that they do not snag on the seat slider (when it slides back and forth)

 
15. On the back of the seat, pull the center flap through. (Note - you can use wide nose pliers to get this extra tight). Having this bottom cover tight will create a better looking cover and overall tighter fit.

Feed both draw strings through the slots on the flap, until both ends meet in the middle.







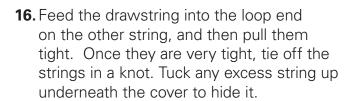

(Tip - Use the pliers to pull the string tighter than you can with your fingers/hands. You can also use the pliers to hold the knot in place while you tie it off).

17. Go back onto the front of the seat, and readjust the cover as needed. You may also need to re-tighten the drawstring. Small creases or wrinkles may be there for a few days, until the cover stretches out and warms up. Then they will smooth out.



18. On the back of the seat, let the carpet flap come down, and then use the elastic band to connect it underneath the seat. That way the carpet flap stays tucked up and out of the way.



19. Armrest Install

Grab your armrest cover, and make sure you have the correct side (the attachment hole and large opening should all be on the bottom side of the cover).

Start sliding the cover over the armrest, but do not put it on all the way.











20. Put the armrest with cover back onto the seat. Re-attach the bolt and tighen down with a 5mm Allen Head, then re-attach the plastic cover over the bolt.

Once that is done, pull the cover over the rest of the armrest, and attach the hook&loop strips together. Attach the strips that are up against the seat first, then do the long strip on the bottom.

21. Headrest Cover Install

Make sure you have the correct headrest cover - so that the adjustment hole is on the correct side, and the PRP rubber patch is on the back of the headrest.

Slide the cover over the top of the headrest and down. Tip - It's easist the place the metal spokes of the headrest against the floor and push. Push and depress the foam while you pull the cover down.

22. Once the headrest cover is on, push hole for the plastic button underneath one side of the plastic, then the other so that it sits flush.

On the bottom, attach the hook&loop strips together. Put the headrest back on the seat. Do a final check and push the material around as needed until the cover is sitting correctly and the logos are level.

23.... And You're All Done!

If you have any questions or experience issues, please contact your retail outlet first for help. However, the staff at PRP Seats is always happy to assist you.

1-800-317-6253. customerservice@prpseats.com Thank you! Ride safe!

