



INSTALLATION INSTRUCTIONS


Resonator Upgrade Pipe

MAKE: Ford
MODEL: F-150
YEAR: 2015-2020
ENGINE: V6-2.7L(tt)&3.5L(tt)/ V8-5.0L

49C43132

NOTE: Only fits with aFe POWER exhaust systems

49-43074-B/P, 49-43073-B/P, 49-33123-B/P,
49-43070-B/P, 49-43068-B/P, 49-33130-B/P

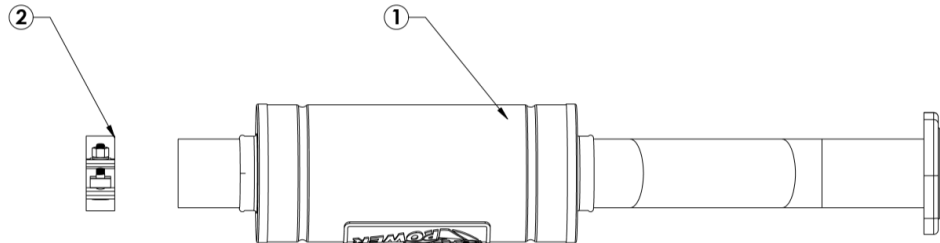

Item	Description	Part Number	Quantity
1	Resonator Assembly	05-244198	1
2	Clamp, Band; 3"	03-50415	2

aFe POWER recommends professional installation on this product. Thoroughly inspect the aFe POWER exhaust system to make sure there is no damage from shipping (if damage is noted, immediately contact aFe POWER customer service). Allow time for your vehicle to cool down prior to installation. When working on your vehicle proceed with caution. Wear protective safety equipment; eye goggles and gloves to ensure a safe installation.

Install band clamps to proper torque specifications of 40-45 ft-lb.



1. **(Read instructions prior to installation.)** It is recommended to not fully tighten the exhaust until it has been fully installed. Leave loose for adjustability.
2. Secure vehicle on jack stands (refer to your manual for specified jack stand positions).
3. For faster installation, spread out the parts of the exhaust alongside your vehicle as shown in the diagram above.
4. Secure the stock exhaust with jack/stands.
5. Depending on user's aFe POWER exhaust system, remove the aFe POWER Front Pipe (05-245092) for exhaust systems: 49-33130-B/P & 49-33123-B/P or remove the aFe POWER Mid Pipe (05-144062) for exhaust systems: 49-43074-B/P, 49-43073-B/P, 49-43070-B/P, & 49-43068-B/P.
6. Install the aFe POWER Resonator Assembly using the O.E. bolts and the provided band clamp. **Do Not Fully Tighten.**
7. Ensure that all the components of the aFe POWER exhaust system are aligned and are at a safe clearance from all wires, hoses, brake lines, body parts, and tires.
8. Start from the front of the aFe POWER exhaust system and evenly tighten all clamps and fasteners.
9. Start the vehicle and check for any leaks. If any leaks are found, determine cause and repair as necessary.
10. Remove vehicle from jacks stands.
11. It is recommended to re-tighten all clamps and hardware after 50-100 miles.