


**Clayton Off Road
COR-1400200
Jeep Wrangler Rear Bump Stops (1997-2006, TJ/LJ)**

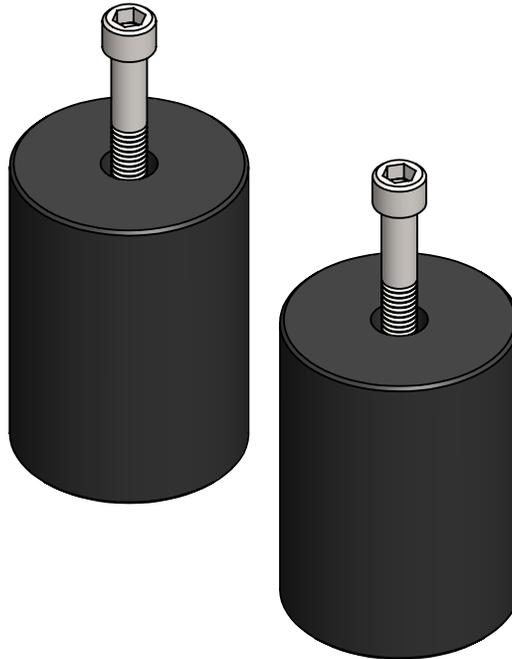

NOTES: This product may require general welding, fabrication and automotive mechanic skills. Welding should only be done by a competent welder. Clayton Off Road implies no guarantees or warranties and is not liable for improper installation. Some grinding and fitment may be required when installing this product. Every vehicle varies slightly and some fabrication may be required. For more information please visit our website.

Refer to picture below.

Step 1: Remove spring.

Step 2: Center bump stop on lower coil bucket.

Step 3: Mark hole location on lower coil bucket.

Step 4: Drill 5/16" hole in lower coil bucket.

Step 5: Tap hole 3/8"-16

Step 5: Insert bump stop with bolt into spring and install spring.

Step 6: Tighten bolt.

There is an optional rear coil spring retainer kit available which goes under the bump stop to hold the spring in place on the upper and lower coil buckets. It is part number 1200508.

