


**CLAYTON OFF ROAD
COR-1200510
JEEP WRANGLER REAR SHOCK EXTENSIONS (1997-2006, TJ/LJ)**

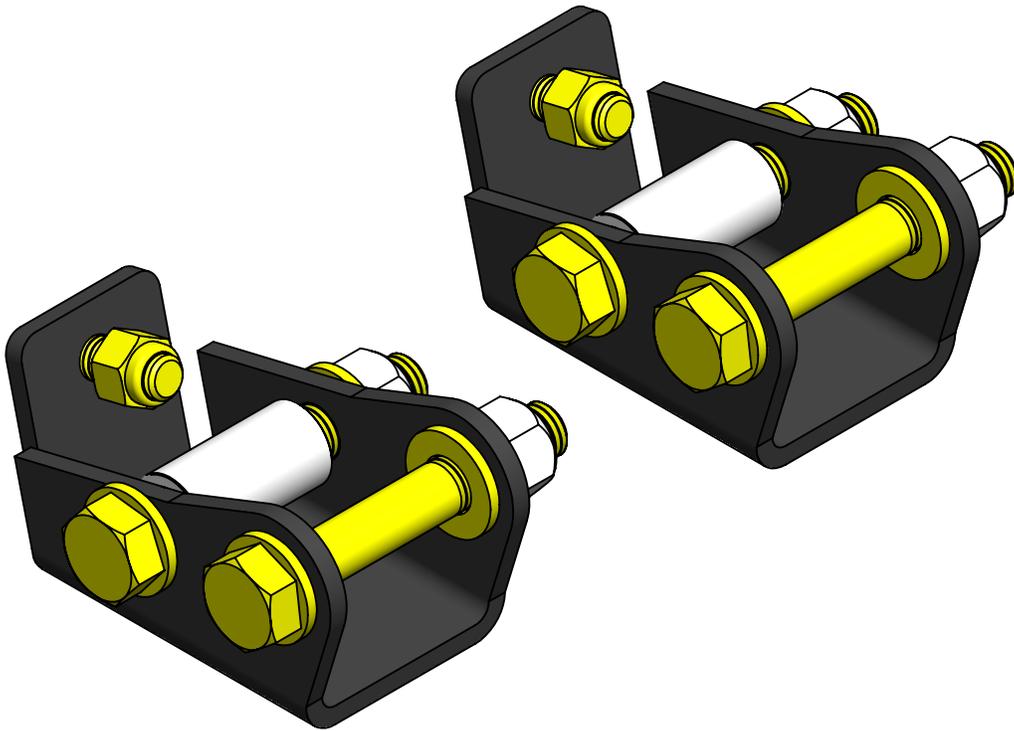

NOTES: This product may require general welding, fabrication and automotive mechanic skills. Welding should only be done by a competent welder. Clayton Off Road implies no guarantees or warranties and is not liable for improper installation. Some grinding and fitment may be required when installing this product. Every vehicle varies slightly and some fabrication may be required. For more information please visit our website.

- Step 1: Remove lower shock bolt.
- Step 2: Slide shock extension over shock mount.
- Step 3: Install 3/8"-16 x 1" bolt from front.
- Step 4: Install 3/8"-16 lock nut.
- Step 5: Hold aluminum spacer in shock mount.
- Step 6: Install M12 x 1.75 x 80mm bolt with M12 washers.
- Step 7: Install M12 x 1.75 lock nut.
- Step 8: Tighten 3/8" bolt to 30 ft-lbs.
- Step 9: Tighten M12 bolt to 70 ft-lbs.
- Step 10: Use two M12 washers as spacers on the either of the shock eye.
- Step 11: Install M12 x 1.75 x 80mm bolt with washers.
- Step 12: Install M12 x 1.75 lock nut.
- Step 13: Tighten M12 bolt to 70 ft-lbs.

