



Installation Instructions

THIRD BRAKE LIGHT MOUNT

Product Number: M2050

For application with the Y1261T Tire Carrier

SAFETY

Your safety and the safety of others is very important.

- In order to help you make informed decisions about safety, we have provided installation instructions and other information.
- These instructions alert you to potential hazards that could hurt you or others.
- Please do a job safety analysis (JSA) before each task to identify potential hazards for your situation and remove/protect against them.
- You must use your own good judgment, and take your time.

Read and understand all safety precautions and instructions before installing this product.

THIS PRODUCT IS FOR OFFROAD USE ONLY. ALL LIABILITY FOR INSTALLATION AND USE RESTS WITH THE OWNER.

CARELESS INSTALLATION AND OPERATION CAN RESULT IN SERIOUS INJURY OR EQUIPMENT DAMAGE.

Injury hazard

Failure to observe these instructions could lead to severe injury or death.

- Always** remove jewelry and wear eye protection.
- Always** use extreme caution when jacking up a vehicle for work. Set emergency brake and use tire blocks. Locate and use the vehicle manufacturers designated lifting points. Use jack stands.
- Always** use appropriate and adequate care in lifting components into place.
- Always** insure components will remain secure during installation and operation.
- Always** wear safety glasses when installing this kit. A drilling operation will cause flying metal chips. Flying chips can cause serious eye injury.
- Always** use extreme caution when drilling on a vehicle. Thoroughly inspect the area to be drilled (on both sides of material) prior to drilling, and relocate any objects that may be damaged.
- Always** use extreme caution when cutting and trimming during fitting.
- Always** tighten all nuts and bolts securely per installation instructions.
- Always** route electrical cables carefully. Avoid moving parts, components that become hot and rough or sharp edges.
- Always** insulate and protect all exposed wiring and electrical terminals.
- Always** perform regular inspections and maintenance on mounts and related hardware.





Installation Instructions

THIRD BRAKE LIGHT MOUNT

Product Number: M2050


For application with the Y1261T Tire Carrier

I. Overview

Congratulations on your new purchase of the Jeep JK Third Brake Light accessory. This Third Brake Light Mount was designed in conjunction with the Y1261T Off the Door Tire Carrier and is adjustable to provide the best look for your application.

Your Third Brake Light Mount was designed in 3-D from digitized data, CNC laser cut, fabricated, and powder coated... all in the U.S.A. Enjoy the fit and finish of a quality Jeep Tire Carrier and Third Brake Light from Fab Fours, Inc.

WARNING: This product was designed to be used with the Fab Fours JK Tire Carrier ONLY.

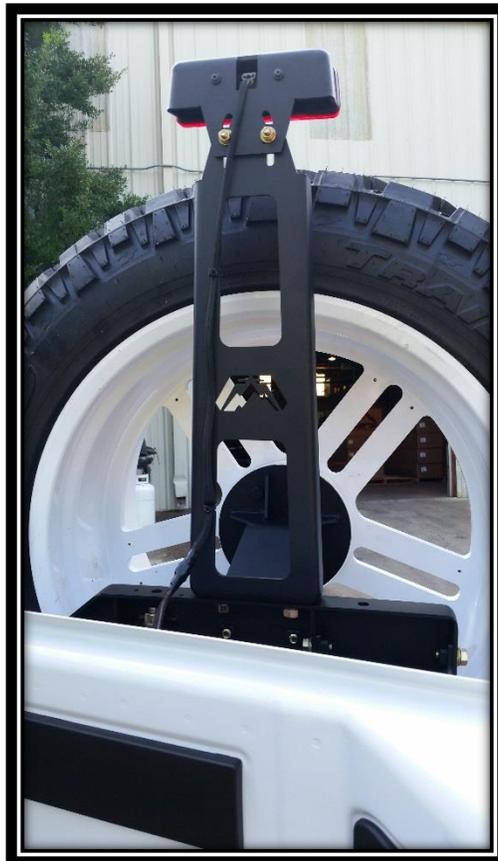



Installation Instructions

THIRD BRAKE LIGHT MOUNT

Product Number: M2050

For application with the Y1261T Tire Carrier

II. Tools Required

- 7/16," 5/8," 11/16," Wrenches and sockets
- Socket wrench and short extension
- Pliers

III. Third Brake Light Installation

1. Due to the installation of the tire carrier, the third brake light should already be removed from your vehicle.
2. Cut the wires that attach the plug to your third brake light around the halfway point.
3. Insert the wires coming from the jeep through the top corner of the door plate provided with the tire carrier.
4. Trim and insert the cut ends of the wires into the provided male and female quick connects. We recommend using both males on the same wire ends to avoid confusion. Crimp the quick connects onto the wires using a pair of pliers.
5. Attach the lower portion of the brake light mount to the top of the tire carrier using the two provided 7/16 bolts and washers.

**Note* You have four holes to choose from, if you don't have an accessory antenna installed. This allows you to adjust to either side and tilt the light itself for larger tire applications or an asymmetrical look.*

6. Cut the lower portion of your stock third brake light off and use the stock screws to attach it to the top piece of the third brake light mount.
7. Using the provided 1/4 hardware, attach the top portion of the third brake light to the bottom that is attached to the tire carrier.





Installation Instructions THIRD BRAKE LIGHT MOUNT

Product Number: M2050

For application with the Y1261T Tire Carrier

8. Plug the connector to the third brake light and the quick connects to the appropriate wires.
9. Zip tie the wires to the provided cut outs.

Maintenance/Care

- Periodically check and tighten all nuts.
- Stripped, fractured, or bent bolts or nuts need to be replaced.
- Periodically grease the tire carrier pivot.
- Periodically check the tension of the latch hook..

Contact Information

Fab Fours Inc.
1312 Camp Creek Rd.
Lancaster, SC 29720

Phone (866)-385-1905
Fax (970)-385-1914
Email Support@fabfours.com



More than expected...

Better than expected

