



WWW.SMITTYBILT.COM


## Installation Instructions Rear Frame Cover

(Part# JB48CRT) 2007-2009 Wrangler

### PARTS LIST

2	Fill plates
2	10MM X 25MM bolts
2	10MM X 25MM lock nuts
4	10MM washers

- 1. REMOVE CONTENTS FROM BOX AND CHECK FOR DAMAGE. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY.**
2. Locate, remove and set aside the individual plates.
3. Remove the top bolt from each side of the bumper mount and set them aside.
4. Set one of the plates over its location (Fig 1)
5. Start the bolt in the removable bracket. The removable bracket can be loosened and moved over to align with the fill plate bracket. (Fig 2)
6. Start the bolt in the bumper mount (Fig 3)
7. Repeat the operations on the other side of the vehicle
8. Level and adjust the plates before tightening the fasteners. Leave a gap of about 1/8-inch around the plates. (Fig 1)

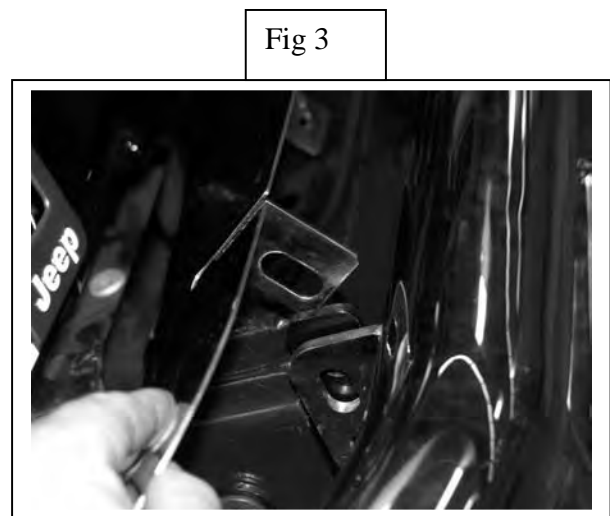

For Technical Support/Warranty Information please call 310-762-9944

Smittybilt, 400 West Artesia Blvd, Compton, CA 90220