

**Product Number: E4151 Application: 2017-2020 Ford Super Duty** 

#### Your safety and the safety of others is very important.

- In order to help you make informed decisions about safety, we have provided installation instructions and other information.
- These instructions alert you to potential hazards that could hurt you or others.
- Please do a job safety analysis (JSA) before each task to identify potential hazards for your situation and remove/protect against them.
- You must use your own good judgment, and take your time.

Read and understand all safety precautions and instructions before installing this product.

THIS PRODUCT IS FOR OFFROAD USE ONLY. ALL LIABILITY FOR INSTALLATION AND USE RESTS WITH THE OWNER.

CARELESS INSTALLATION AND OPERATION CAN RESULT IN SERIOUS INJURY OR EQUIPMENT DAMAGE.

SENSORS FIELD OF VIEW WILL BE ALTERED WITH USE OF THE REPLACEMENT BUMPER.

#### Injury hazard

#### Failu

ıre	to observe these instructions could lead to severe injury or death.
	Always remove jewelry and wear eye protection.  Always use extreme caution when jacking up a vehicle for work. Set emergency brake and use tire blocks. Locate and use the vehicle manufacturers designated
	lifting points. Use jack stands.
	Always use appropriate and adequate care in lifting components into place.  Always ensure components will remain secure during installation and operation.
ā	<b>Always</b> wear safety glasses when installing this kit. A drilling operation will
	cause flying metal chips. Flying chips can cause serious eye injury.
	Always use extreme caution when drilling on a vehicle. Thoroughly inspect the
	area to be drilled (on both sides of material) prior to drilling, and relocate any
	objects that may be damaged.
	Always use extreme caution when cutting and trimming during fitting.
	Always tighten all nuts and bolts securely per installation instructions.
	Always route electrical cables carefully. Avoid moving parts, components that
	become hot and rough or sharp edges.
	Always insulate and protect all exposed wiring and electrical terminals.
	Always perform regular inspections and maintenance on mounts and related
	hardware.



Product Number: E4151 Application: 2017-2020 Ford Super Duty

#### I. Overview

Congratulations on your purchase of the industries' best and most stylish Ford Super Duty Rear Bumper! This bumper has been **engineered** for strength while keeping the weight down.

This product has also been **engineered** to allow alignment in three directions so you will end up with a very professional fit.

Your bumper was designed in 3-D, fabricated, and powder coated... all in the U.S.A.

Enjoy the fit and finish of a quality Ford Super Duty Rear Bumper from Fab Fours Inc!






Product Number: E4151 Application: 2017-2020 Ford Super Duty

#### II. Vehicle Preparation

1. Start by locating the trailer plug and tag light plug shown below. Unplug both of these.

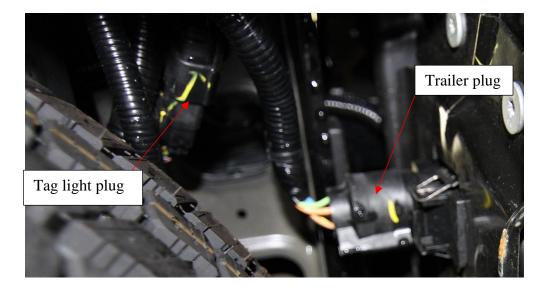

2. Next using a 13/16" deep socket remove the four nuts holding the factory rear bumper brackets to the frame on each side of vehicle. See image below.





Product Number: E4151 Application: 2017-2020 Ford Super Duty

3. Next using ½" socket remove the two bolts located on either side of receiver tube (see image). Once these are removed rear bumper is ready to come off vehicle.




#### **III. Sensor Installation**

1. Remove sensors for rear bumper and place them in corresponding location in Fab Fours Bumper. Sensor harness routing shown below. The two inner sensors on the factory bumper will be switched in the Fab Fours Vengeance bumper. Meaning your right inner from the factory is now the left inner in the Vengeance bumper.



Product Number: E4151 Application: 2017-2020 Ford Super Duty

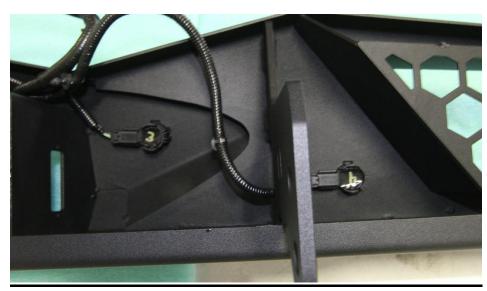

**PASSENGER SIDE** 



**DRIVER SIDE** 


#### **IV.** Bumper Installation

1. Install the black license plate lights into the bumper by using the supplied #8 hardware. These will be wired once the bumper is installed.



Product Number: E4151 Application: 2017-2020 Ford Super Duty


2. \*When experiencing a hyper flash or when replacing halogen lights with led lights a resistor should be used. The resistor will wire into the positive power supply to the light and the negative side of the ground supply to the light.

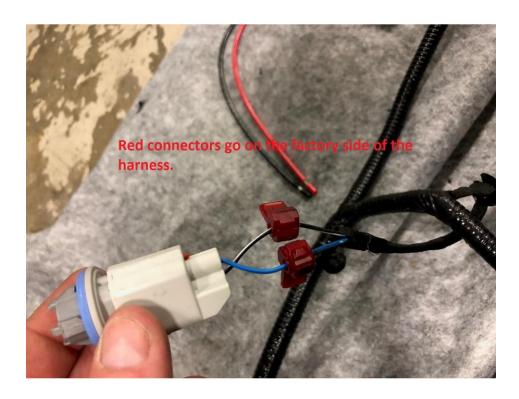



#### Installation Instructions Vengeance Rear Bumper Product Number: E4151

Product Number: E4151 Application: 2017-2020 Ford Super Duty

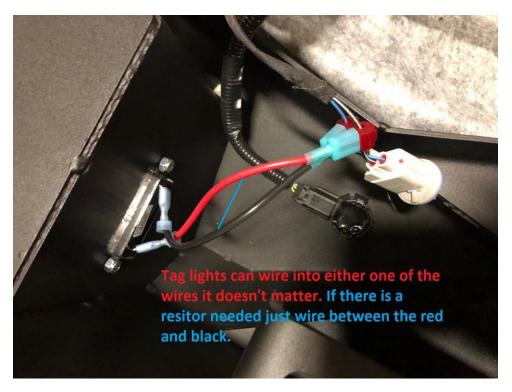



Product Number: E4151 Application: 2017-2020 Ford Super Duty


3. Drill the OEM Trailer Hitch Plug using a #16 Drill Bit (.177") in the locations pointed out with arrows below. Use care to drill directly in the center of the circles in the plastic.





Product Number: E4151 Application: 2017-2020 Ford Super Duty


- 4. Install the trailer plug into the cutout in the new bumper using the #8 supplied hardware.
- 5. Next using provided terminals splice into factory tag light wiring.

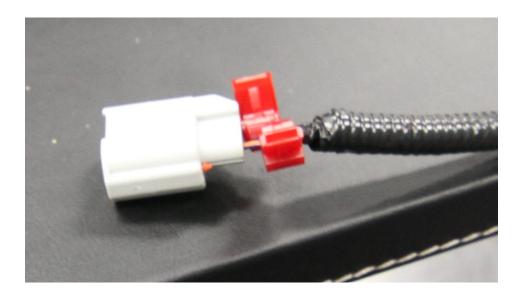

6. Next slide bumper into place by line up Fab Fours mounting bracket with OEM mounting location on the outside of the frame.



Product Number: E4151 Application: 2017-2020 Ford Super Duty

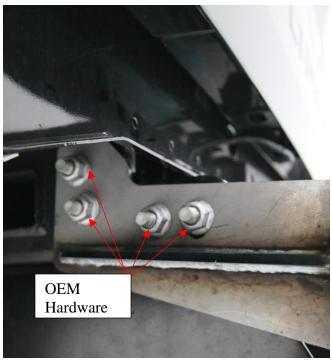

- 7. Loosely install factory hardware back into bumper mount.
- **8.** Finally position bumper into desired location and tighten all of the OEM hardware.
- 9. To complete installation you can now hook up tag lights and plug in the trailer plug connector.

#### V. Maintenance/Care

- ☐ Periodically check and tighten all fasteners.
- ☐ Stripped, fractured, or bent bolts or nuts need to be replaced.
- ☐ Keep all surfaces free of dirt, road grime, and standing water to ensure finish longevity.




Product Number: E4151 Application: 2017-2020 Ford Super Duty

#### VI. Contact Information

Fab Fours Inc. 2213 Industrial Park Rd. Lancaster, SC 29720 Phone (866)-385-1905 Fax (866)-574-1424

Email Support@fabfours.com

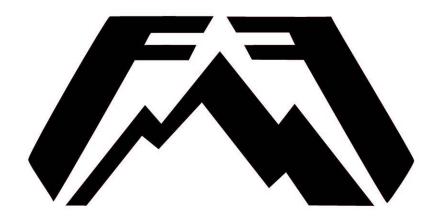

More than expected... Better than expected