



OLD MAN EMU

FITTING INSTRUCTIONS

FK72

Ford Superduty
2008 On F250/350
Sway Bar Drop Bracket Front

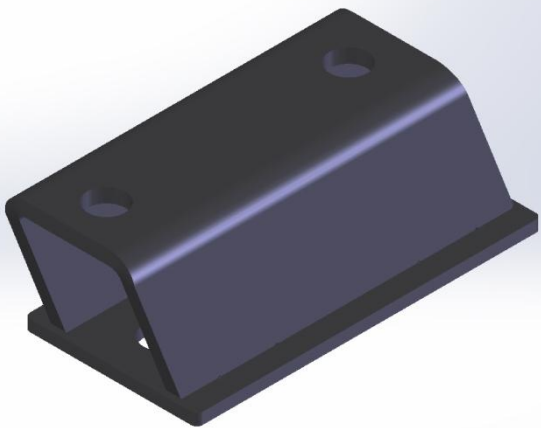
HAND TOOLS REQUIRED

Ring / Open end Spanner set (Metric)
Torque Wrench

WORKSHOP TOOLS REQUIRED

None

KIT CONTENTS

PART NO.	QTY	DESCRIPTION	PICTURE
3759351	2	Sway Bar Drop Bracket	
6151324	4	Bolt M12 x 35	
6151528	4	Nut Nyloc M12	
4581050	4	Washer Spring	
4581049	4	Washer Flat	

Fitting Procedure

1. Remove the fixed chassis sway bar saddles on both sides and lower sway bar.



2. Insert both drop brackets (3753951) with the offset towards the front, re use OE M10 bolts. Torque to 40Nm



3. Remount sway bar using OE Saddles and supplied M12 Bolts, nuts and washers. Torque to 80Nm.

