



2007-2013 CHEVY 1500 20" SINGLE LIGHT MOUNT

Thank you for choosing Rough Country for all your off road needs.

▲ NOTICE Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.

If question exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning the design, function, and correct use of our products.

▲ NOTICE Only fits **Chevrolet 1500 2007-2013** models.


Tools Needed:
10mm Socket
Flathead Screwdriver
13mm Wrench



Kit Contents:
1-Rough Country LED Light Bracket
1-70523BAG2 containing:
Instructions
(2) 8mm bolts

INSTALLATION INSTRUCTIONS

1. Using a 10mm socket, remove the 3 bolts behind bumper opening. **See Photo 1.**
2. Remove push pins holding rubber air flap. Push flap down and save push pins for reinstallation. **See Photo 2.**

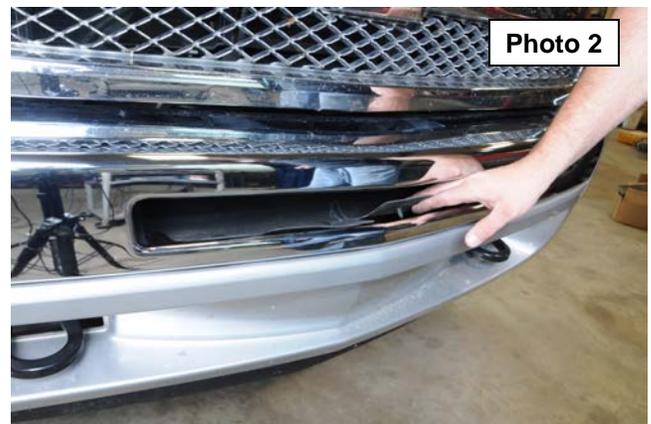

3. Place bracket through opening in bumper. Reinstall the 3 factory bolts (Do Not Tighten). **See Photo 3.**
4. Install light in bracket through opening in bumper using supplied 8mm bolts. **See Photo 4.**



5. Make sure light and bracket are centered in bumper and tighten the 3 bolts holding the bracket in.
6. Replace rubber air flap and push pins. **See Photo 5.**
7. Set desired light angle and tighten 8mm bolts. **See Photo 6.**



Thank You for choosing Rough Country for your lighting needs!!!

**ROUGH
COUNTRY**
SUSPENSION SYSTEMS

By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable Federal, State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyers responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.