



**ROUGH  
COUNTRY**  
SUSPENSION SYSTEMS.

## 2006-2008 F-150 20" Dual Row Bumper Mount

Thank you for choosing Rough Country for all your suspension needs.

- ⚠ WARNING** Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.
- ⚠ CAUTION** This bracket kit was designed to fit **2006-2008** models only, using **Rough Country Dual Row 20" Cree LED light**.

### Tools Needed:

8mm socket  
10mm socket  
Flat Screwdriver



### Kit Contents:

(2) Light Brackets  
Installation Hardware

### INSTALLATION INSTRUCTIONS

- Using 8mm socket remove the two lower air dam bolts. **See Photo 1.**
- Using a 10mm socket remove the upper bumper bolts on each side. **Photo 2.**





- Using a flat screwdriver, remove the factory clip nuts from the upper bumper brackets. **See Photo 3.**
- Place driver's side bracket in bumper. **See Photo 4.**




By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable Federal, State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyers responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.

5. Using factory 8mm hardware bolt mount to lower air dam. **See Photo 5.**
6. Using supplied 5/16" bolts, nuts, and washers, bolt mount to upper bumper bracket. **See Photo 6.**

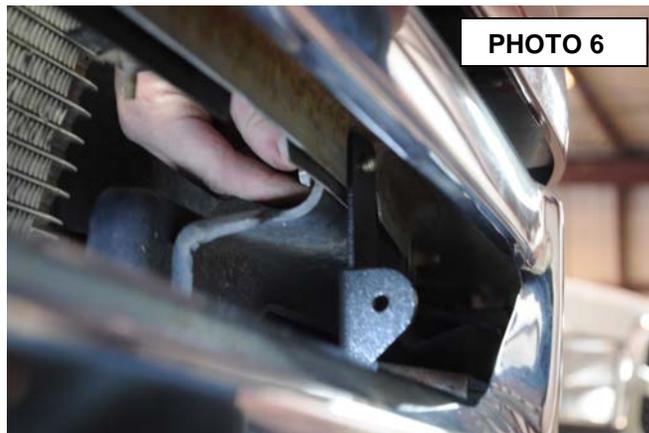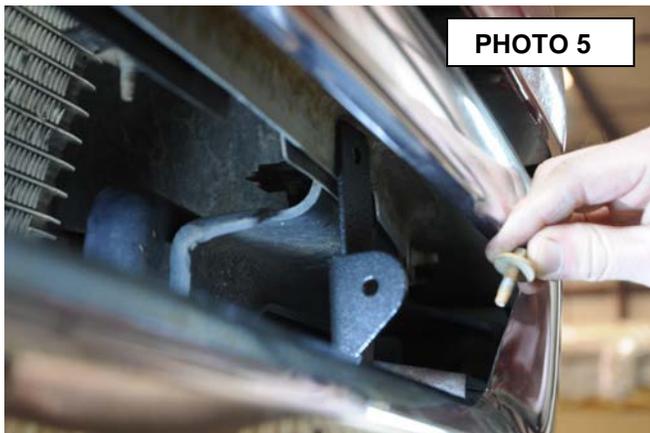

7. Tighten upper bolt using 1/2" socket and wrench. **See Photo 7.**
8. Tighten lower air dam bolt with 8mm socket.
9. Slide light into bumper from bottom and bolt to driver's side bracket with supplied light hardware. **Do Not Tighten.**
10. Bolt passenger side mounting bracket to light with supplied light hardware. **Do Not Tighten.**
11. Repeat steps 5, 6, and 7 for passenger side bracket.
12. Adjust light position. Using supplied Allen wrench tighten light bolts on driver and passenger side. **See Photo 8.**
13. Wire light using supplied wiring harness.

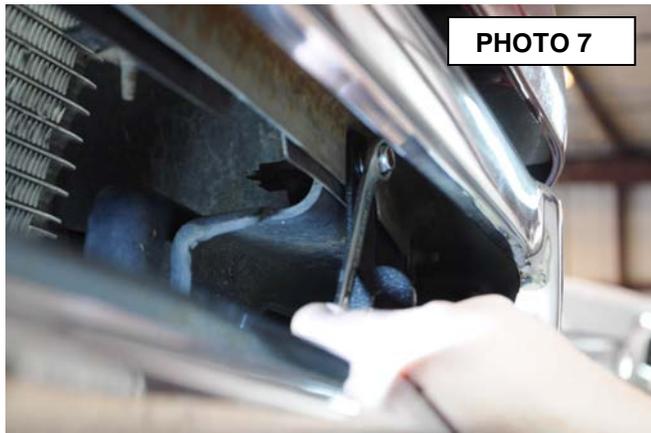

**Check out these other Rough Country products for your F150:**



SKU: 70920  
Rough Country 20" Dual Row Cree LED Light Bar

SKU: 570  
Rough Country 2.5" Leveling Strut Spacers



SKU: 73920  
Rough Country CAMO 20" Dual Row Cree LED Light Bar



By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable Federal, State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyers responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.