

## POLARIS 2016-20 General Front 2" Cube Mount Lights

Thank you for choosing Rough Country for all your vehicle needs.

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.

If question exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning this product.

Check all fasteners for proper torque. Check to ensure for adequate clearance between all components.

Periodically check all hardware for tightness.

### KIT CONTENTS:

Driver Side Cube Mount x1  
Pass Side Cube Mount x1

### TOOLS NEEDED:

15mm Wrench or Socket





### Torque Specs:

Size	Grade 5	Grade 8	Size	Class 8.8	Class 10.9
5/16"	15 ft/lbs	20ft/lbs	6MM	5ft/lbs	9ft/lbs
3/8"	30 ft/lbs	35ft/lbs	8MM	18ft/lbs	23ft/lbs
7/16"	45 ft/lbs	60ft/lbs	10MM	32ft/lbs	45ft/lbs
1/2"	65 ft/lbs	90ft/lbs	12MM	55ft/lbs	75ft/lbs
9/16"	95 ft/lbs	130ft/lbs	14MM	85ft/lbs	120ft/lbs
5/8"	135ft/lbs	175ft/lbs	16MM	130ft/lbs	165ft/lbs
3/4"	185ft/lbs	280ft/lbs	18MM	170ft/lbs	240ft/lbs



## INSTALLATION INSTRUCTIONS

1. Remove the 2 bolts in the lower cage mount using a 15mm wrench and socket. Right front shown in photos. Retain hardware. **See Photo 1.**
2. Locate the right and left front brackets. **See Photo 2.**

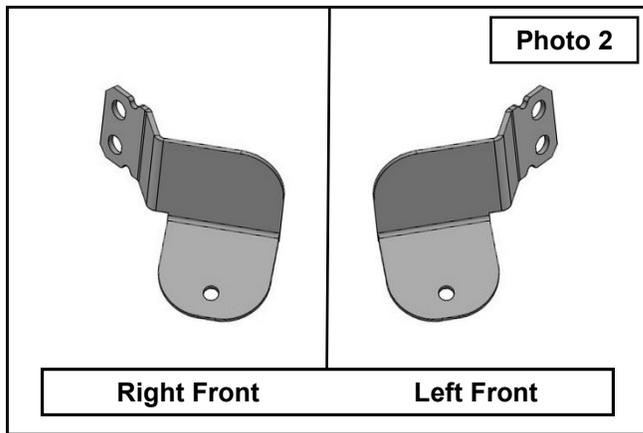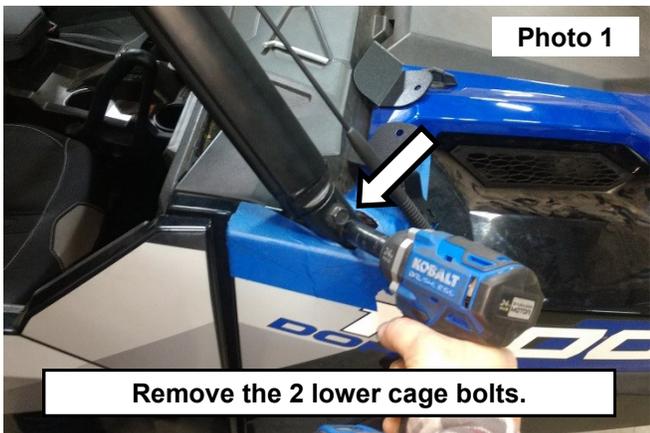

3. Install the right front bracket onto the lower cage mount using the 2 OE bolts. Tighten the bolts using a 15mm wrench and socket. **See Photo 3.**
4. Install the wiring harness supplied in the light kit using the corresponding instruction sheet.
5. Install the light onto the light bracket using the supplied hardware. Then connect the light to the wiring harness. **See Photo 4.**



6. Set the light to the desired position and tighten the light to the mount. **See Photo 5.**
7. Repeat steps 1-6 on the opposite side of the cage. **See Photo 6.**

