

Installation Instructions for Chevrolet Camaro PN's-11845, 11846, 11847, 11848, 11849, 11850, 11851, & 11852



******* Please compare the parts in the box with the bill of materials provided *****
to assure that you have all the parts necessary for this installation.**

These instructions have been written to help you with the installation of your Borla Performance Exhaust System. Please read this document completely before beginning the installation of your system.

To ensure this part number fits your specific model year, please visit our website for the latest model year listings at www.BORLA.com

Thank you for purchasing a Borla Performance Exhaust System.

Borla Performance Exhaust Systems (11847, 11848, 11849, 11850, 11851, 11852) are designed for the Chevrolet Camaro equipped with a 6.2L V8 engine, automatic or manual transmissions.

Borla Performance Exhaust Systems (11845, 11846) are designed for the Chevrolet Camaro equipped with a 3.6L V6 engine, automatic or manual transmissions.

Borla Performance Industries recommends that an exhaust shop or professional after market parts installer perform the installation of this system. However, if you decide to perform the installation on your own it is recommended that two people are used. This installation should not be performed by one person due to the risk of injury. Ensure the installers use all under car safety precautions including eye protection.

Please take time to read and understand the following...

By installing your Borla Performance Exhaust System, you indicate that you have read this document and you agree with the terms stated below.

It is the responsibility of the purchaser to follow all installation instruction guidelines and safety procedures supplied with your Borla Performance Exhaust System.

Borla Performance Industries assumes no responsibility for damages occurring from misuse, abuse, improper installation, improper operation, lack of responsible care, or all previously stated reasons resulting from incompatibility with other manufacturer's products and/or systems.

Included with your Borla Performance Exhaust System is a warranty card. Please read it carefully before you begin any work on your vehicle. If you should have any questions regarding our warranty policy, installation, or any other matter pertaining to your new Borla Performance Exhaust System, please give us a call at the number provided on the warranty card.

Minimum Required Tool List:


TOOLS:

- 1 3/8" Drive Ratchet
- 2 3/8" Drive Extension 3"
- 3 15mm Deep Well Socket

SHOP SUPPLIES:


- 1 Spray Lubricant

Borla Performance Rear-Section - Bill of Materials

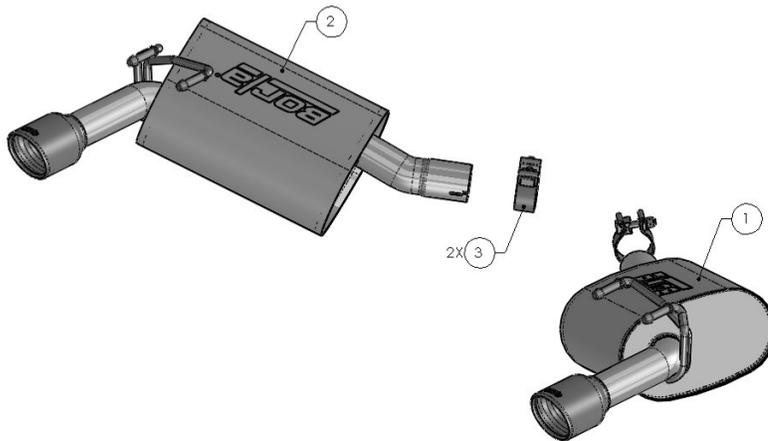

11845

ITEM NO.	QTY.	PART NUMBER	DESCRIPTION
1	1	55091	RH MUFFLER ASSEMBLY
2	1	55092	LH MUFFLER ASSEMBLY
3	2	90112	S/S ACCUSEAL CLAMP Ø2.25

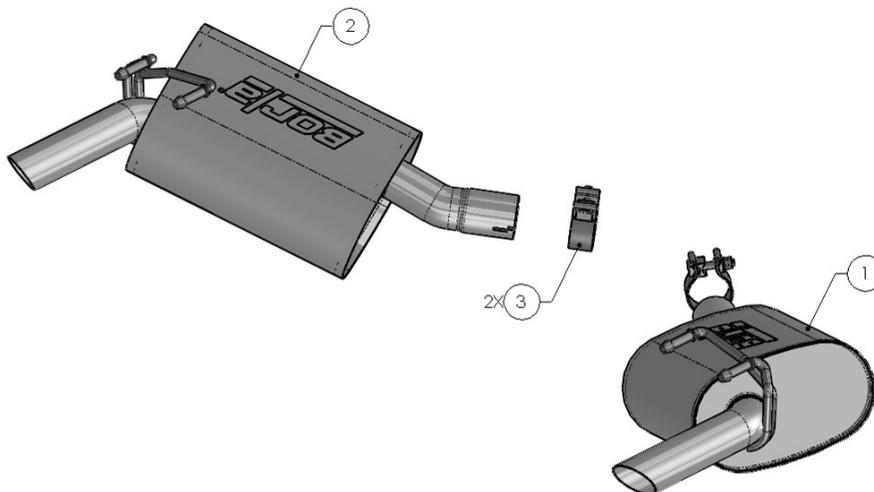

11846

ITEM NO.	QTY.	PART NUMBER	DESCRIPTION
1	1	55093	RH MUFFLER ASSEMBLY
2	1	55094	LH MUFFLER ASSEMBLY
3	2	90112	S/S ACCUSEAL CLAMP Ø2.25

Minimum Required Tool List:


TOOLS:

- 1 3/8" Drive Ratchet
- 2 3/8" Drive Extension 3"
- 3 15mm Deep Well Socket

SHOP SUPPLIES:


- 1 Spray Lubricant

Borla Performance Rear-Section - Bill of Materials

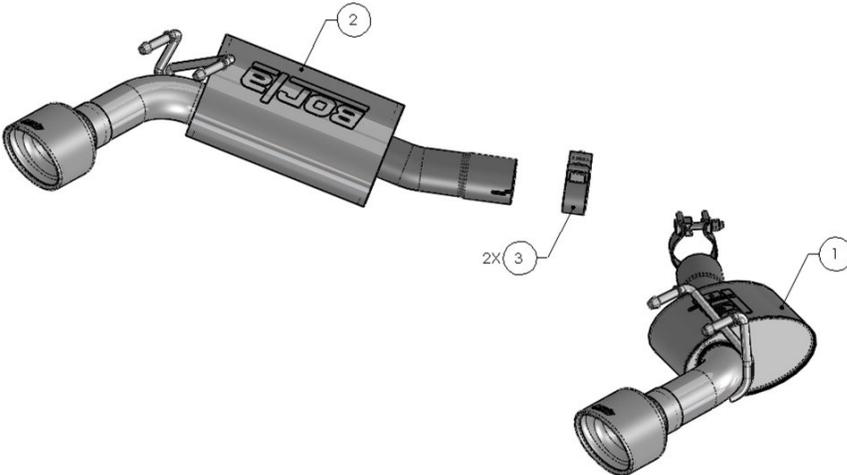

11847

ITEM NO.	QTY.	PART NUMBER	DESCRIPTION
1	1	55095	R/H MUFFLER ASSEMBLY
2	1	55096	L/H MUFFLER ASSEMBLY
3	2	90113	S/S ACCUSEAL CLAMP Ø2.50

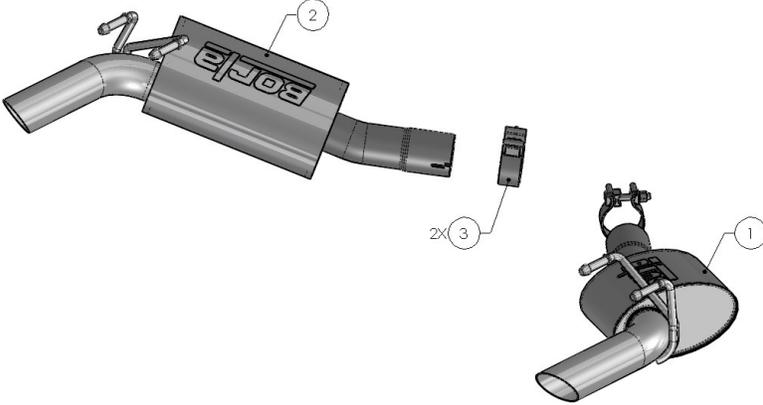

11848

ITEM NO.	QTY.	PART NUMBER	DESCRIPTION
1	1	55097	R/H MUFFLER ASSEMBLY
2	1	55098	L/H MUFFLER ASSEMBLY
3	2	90113	S/S ACCUSEAL CLAMP Ø2.50

Minimum Required Tool List:


TOOLS:

- 1 3/8" Drive Ratchet
- 2 3/8" Drive Extension 3"
- 3 15mm Deep Well Socket

SHOP SUPPLIES:


- 1 Spray Lubricant

Borla Performance Rear-Section - Bill of Materials

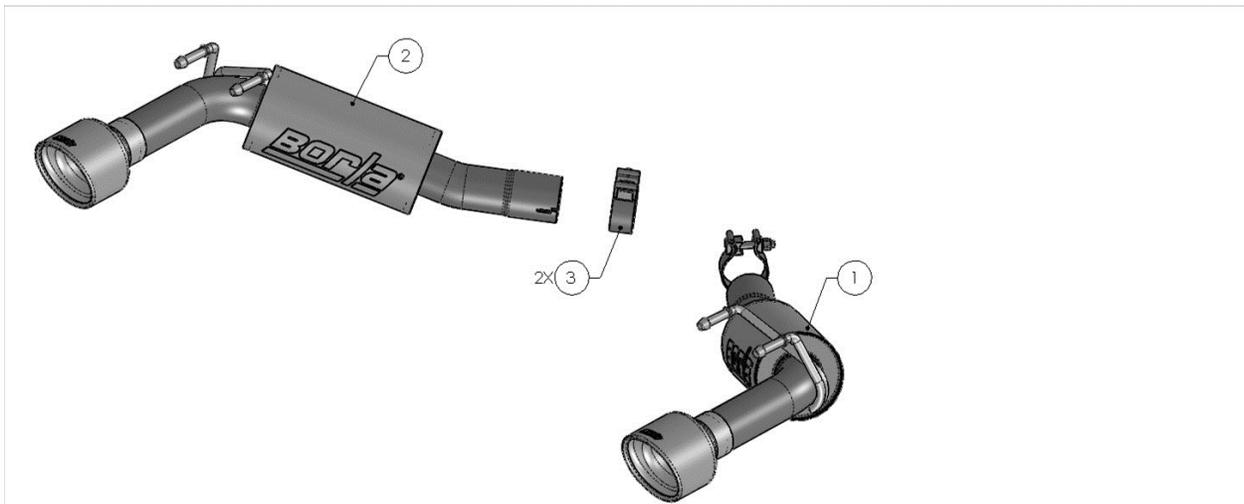

11849

ITEM NO.	QTY.	PART NUMBER	DESCRIPTION
1	1	55099	RH MUFFLER ASSEMBLY
2	1	55100	LH MUFFLER ASSEMBLY
3	2	90113	S/S ACCUSEAL CLAMP Ø2.50

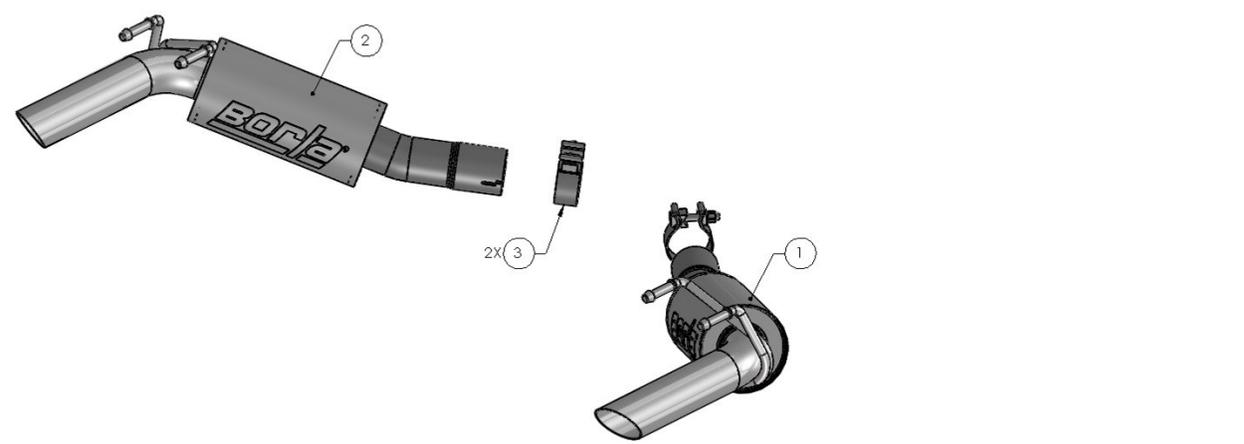

11850

ITEM NO.	QTY.	PART NUMBER	DESCRIPTION
1	1	55101	RH MUFFLER ASSEMBLY
2	1	55102	LH MUFFLER ASSEMBLY
3	2	90113	S/S ACCUSEAL CLAMP Ø2.50

Minimum Required Tool List:


TOOLS:

- 1 3/8" Drive Ratchet
- 2 3/8" Drive Extension 3"
- 3 15mm Deep Well Socket

SHOP SUPPLIES:


- 1 Spray Lubricant

Borla Performance Rear-Section - Bill of Materials

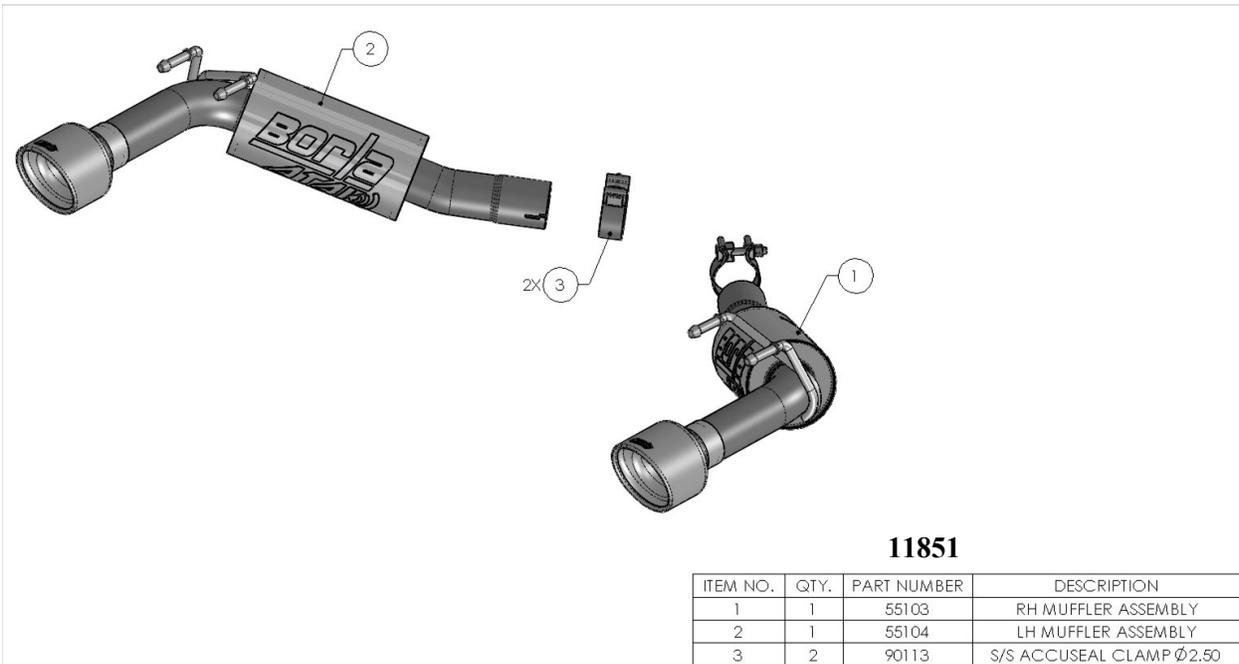

11851

ITEM NO.	QTY.	PART NUMBER	DESCRIPTION
1	1	55103	RH MUFFLER ASSEMBLY
2	1	55104	LH MUFFLER ASSEMBLY
3	2	90113	S/S ACCUSEAL CLAMP Ø2.50

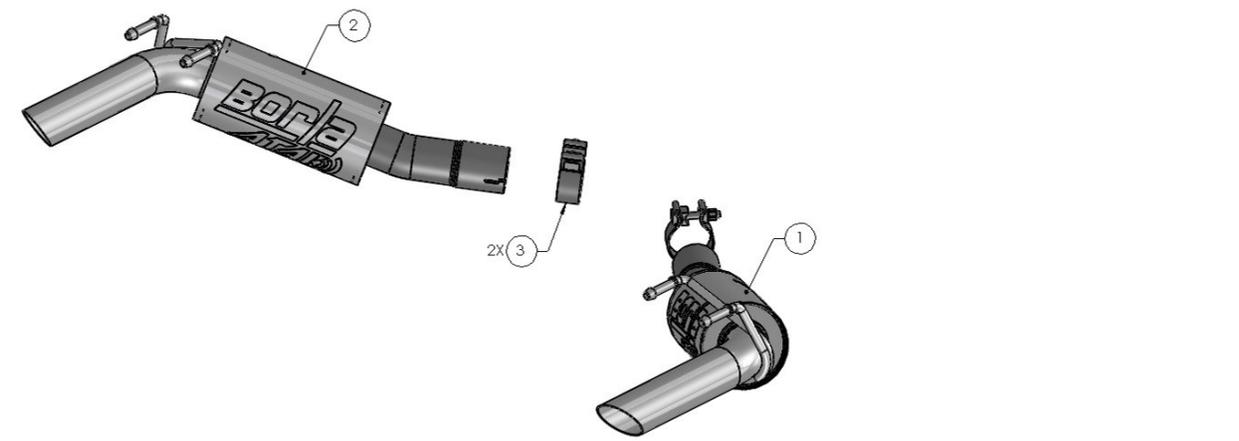

11852

ITEM NO.	QTY.	PART NUMBER	DESCRIPTION
1	1	55105	RH MUFFLER ASSEMBLY
2	1	55106	LH MUFFLER ASSEMBLY
3	2	90113	S/S ACCUSEAL CLAMP Ø2.50

Caution!!! *Never work on a hot exhaust system. Serious injury in the form of burns can result if the vehicle has been in use and the exhaust system is hot, allow vehicle to cool for at least 1 hour. Always wear eye protection when working under any vehicle.*

Note: *It is our recommendation that you use a hoist or hydraulic lift to facilitate the installation of your new Borla Performance Exhaust System.*

Taking all under car safety precautions, lift the vehicle using a hoist or hydraulic lift. Once this has been done, you may begin the removal of your old exhaust system from your vehicle.

Note: *Before removing the original exhaust system from your vehicle, please compare the parts you have received with the bill of materials provided on the previous page to assure that you have all the parts necessary for the installation of your new Borla Performance Exhaust System.*

Note: *With a used vehicle, we suggest a penetrating spray lubricant to be applied liberally to all exhaust fasteners and allowing a significant period of time for the chemical to lubricate the threads before attempting to disassemble.*

Original Exhaust System Removal & Rear Section Installation

1. From under the vehicle use a measuring tape to measure from the muffler box seam back along the axis of the muffler inlet pipe 59mm (2.32") and mark the exhaust pipe. (See Fig. 1) **Note:** *This cut position is the same on both LH & RH side Exhaust Pipes.*
2. Confirm the mark is in the correct location and cut the pipe along the marked cut line.
3. Remove the right-side muffler from its rubber hangers and discard the old muffler. De-burr the ends of the cut exhaust pipes. (See Fig. 2)
4. Slide the exhaust clamp onto the new exhaust pipe. Install the **R/H Muffler Assembly** onto the rubber exhaust hangers and slide the muffler onto the exhaust pipe. (See Fig. 3)
5. Repeat steps 3 & 4 for **L/H Muffler Assembly**.
6. Position tips in rear valence and tighten the clamp bolt to 32-35 ft.lbs. torque. (See Fig. 4)

NOTE: *11846, 11848, 11850, 11852 are designed for the Camaro with optional Ground Effects kit and DOES NOT include welded-on tips.*

WARNING: *Use extreme caution during installation. Torque all fasteners according to manufacturer's torque values and tightening sequence. DO NOT use air impact tools to tighten fasteners on Borla Performance Exhaust Systems. Use of such tools may result in bent flanges or gasket contact areas leading to exhaust leaks.*

NOTE: *When you first start your vehicle after the installation of your new Borla Performance Exhaust System, there may be some smoke and fumes coming from the system. This is a protective oil based coating used in the manufacturing of mandrel bent performance exhaust tubing. This is not a problem and will disappear within a very short period of time after the exhaust has reached normal operating temperatures.*

