


INSTALLATION INSTRUCTIONS

1. THE OE EXHAUST SYSTEM WILL NEED TO BE CUT AND REMOVED TO FACILITATE INSTALLATION OF THE NEW PART..
2. REFERRING TO **FIG. 1**, CUT THE OE EXHAUST AT THE POINT INDICATED AND DE-BURR.
3. REMOVE FRONT PORTION OF THE EXHAUST BY UNFASTENING THE FORWARD 2-BOLT FLANGE.
4. SLIDE THE SUPPLIED U-BOLT CLAMP OVER THE NEW MAGNAFLOW CATALYTIC CONVERTER AT THE OUTLET PIPE.
5. SLIDE THE OUTLET (WITH CLAMP) OF THE MAGNAFLOW CONVERTER OVER THE CUT END OF THE OE EXHAUST AND FASTEN THE FLANGE WITH THE EXISTING HARDWARE. TIGHTEN U-BOLT TO 30-35 FT-LBS.

FIG 1.

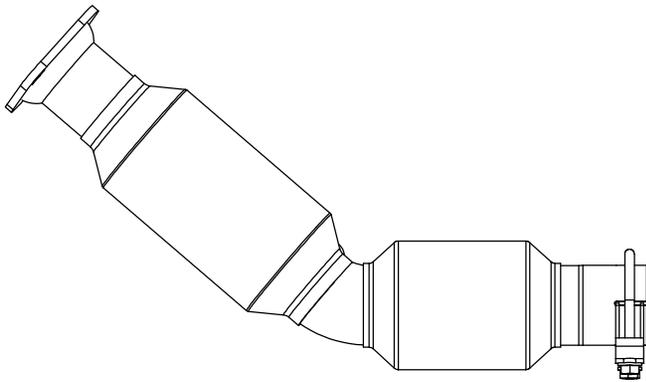

MAGNAFLOW