


### 2014 Lexus IS350 3.5L

**Warning:** When working on, under, or around any vehicle exercise caution. Please allow the vehicle's exhaust system to cool before removal, as exhaust system temperatures may cause severe burns. If working without a lift, always consult vehicle manual for correct lifting specifications. Always wear safety glasses and ensure a safe work area. Serious injury or death could occur if safety measures are not followed.

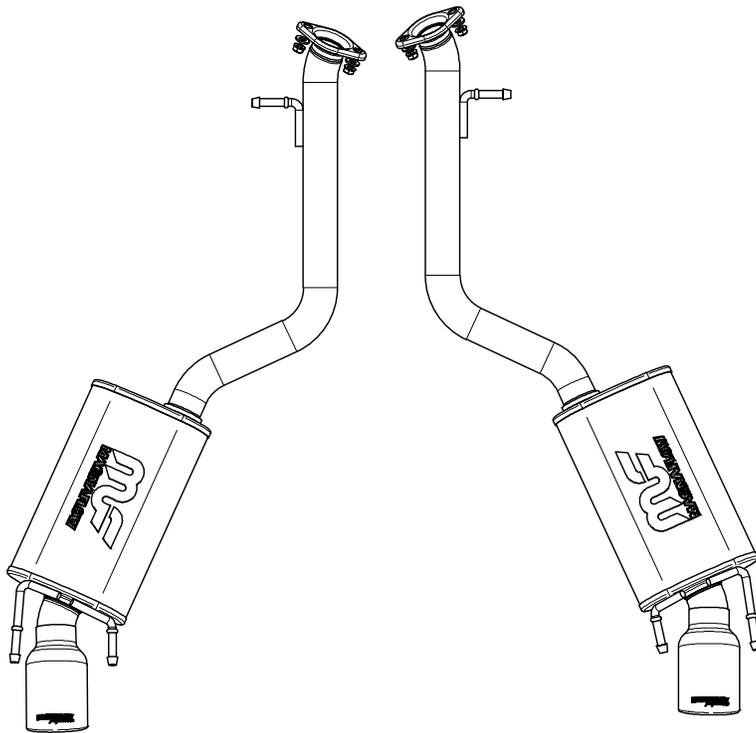

**Step 1:** (Carefully read all instructions before the installation) Begin removal of the OEM exhaust system by unbolting the flanges connecting the OEM muffler assemblies to the resonator (retain all fasteners and rubber insulators as they will be used to install the new system). You can now disengage the hangers and remove the system.

**Step 2:** Install the new Muffler Assemblies by attaching them to the vehicle at the flange junction using the factory hardware and the supplied gaskets, nuts, washers and fitting the hangers into the OEM rubber insulators.

**Step 3:** With all components mounted loosely, adjust the system for overall aesthetics and clearance of frame & bodywork. (MAGNAFLOW recommends at least 1/2" of clearance between the exhaust system and any body panels to prevent heat-related body damage or fire.)

**Step 4:** Once a final position has been chosen for the new system, evenly tighten all fasteners from front to rear. Inspect all fasteners after 25-50 miles of operation and re tighten if necessary.

**\*\* Magnaflow Performance Exhaust recommends professional installation on all their products**

Technical Support: 1-800-959-9226 ext. 4500