



www.PRPSeats.com

800.317.6253

fax 951.894.5108
41537 Cherry St, Murrieta, CA 92592

Can-Am Commander/Maverick Seat Install

DRIVERS SIDE

1. Remove your stock seat and mount using the latch at the back of the seat.

2. Flip the seat over on your bench and remove the four small gold screws that hold the bottom cushion onto the set frame.




3. Flip the seat back over so you are looking at the top and remove the 4 – 13mm nuts that are holding the seat frame to the seat slider.

4. Put the stock seat mount and slider back in the vehicle.



5. Install the driver side adapter plate to the bottom of the PRP seat using supplied 4x 1/4" bolts & washers. Make sure the plate is oriented so that the seat will be centered when it's on the slider.

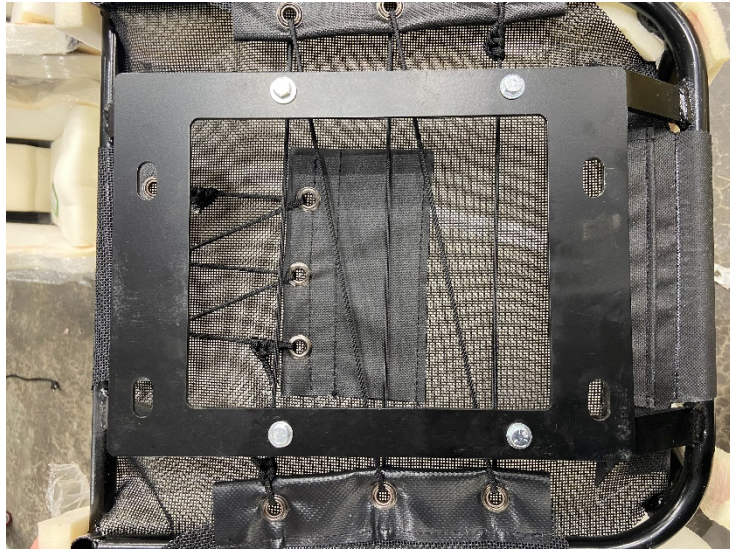

6. Then place the seat into the vehicle with the plate lining up to the bolts on the slider. Reinstall the stock nuts & washers using a 13mm wrench (use a wrench with a ratchet end makes this easier).
7. The driver seat is ready to go!



www.PRPSeats.com

800.317.6253

fax 951.894.5108
41537 Cherry St, Murrieta, CA 92592


Can-Am Commander/Maverick Seat Install

PASSENGER SIDE

1. Remove your stock passenger seat and seat mount using the latch at the back of the seat.
2. You will need to remove the stock rubber pads located at the rear of the seat mount. Then reinstall these on the new PRP Seat mount.




3. Remove the latch and spring from the stock mount. Then reinstall this latch onto the new PRP Seat mount using the provided 6mm nut.

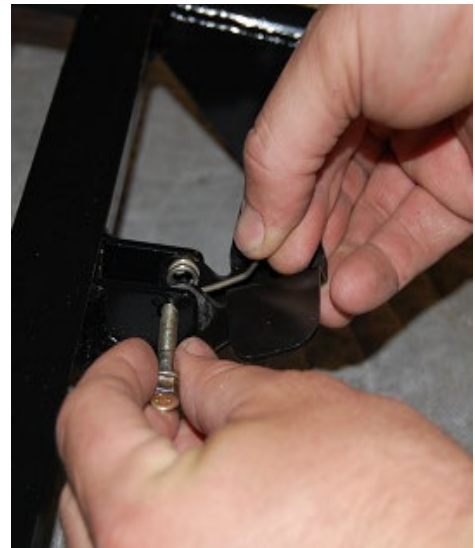



3. Remove the socket head bolt with an Allen wrench and reinstall onto your new PRP Seat mount.

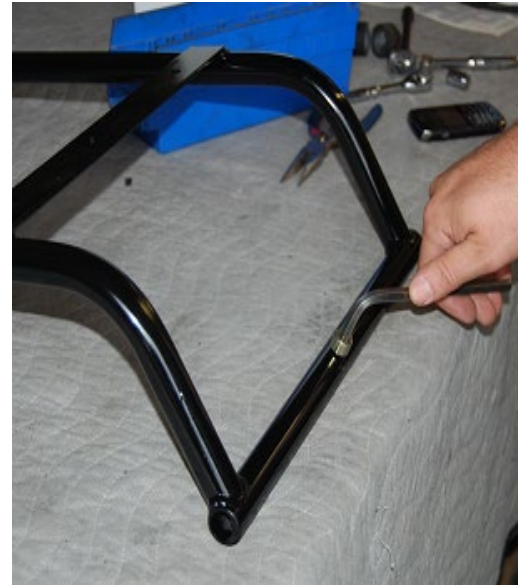

4. Turn your new PRP seats upside down onto your bench. Place the PRP Seat Mount onto the bottom of the seat. Use the 4x 1/4" bolts & washers provided to attach the mount to the bottom of the seat.
5. Place the seat and mount back into the vehicle, and make sure it securely latches.
6. You're all set and ready to ride!