




## INSTALLATION INSTRUCTIONS

MAKE: DODGE/RAM  
MODEL: 1500  
YEAR: 09-19  
ENGINE: V8-5.7L / V6-3.0L

MAKE: RAM  
MODEL: 1500 Classic  
YEAR: 2019  
ENGINE: V8-5.7L

## Exhaust Tip Upgrades

49C42046-B (Black Tip)  
49C42046-P (Polished Tip)

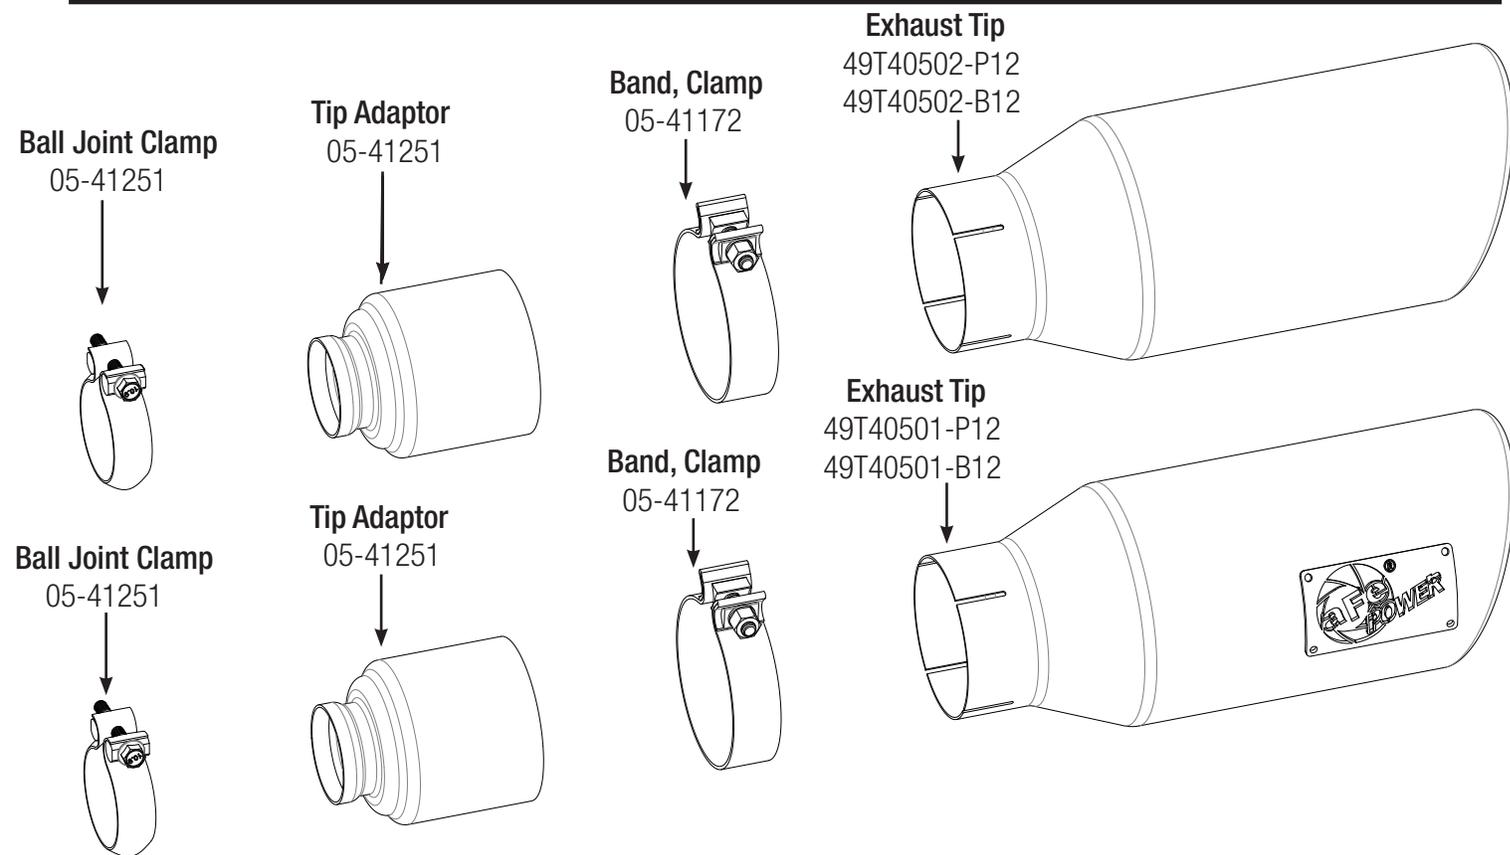

- Step 1:** (Read Instructions prior to installation) For ease of installation spread the pieces of the exhaust a long side of your vehicle according to the diagram shown.
- Step 2:** Loosen up OE spherical clamps attached to stock tips, and remove both stock tips.
- Step 3:** Install aFe Stock exhaust tip upgrade, Using the spherical clamps provided.
- Step 4:** Slightly Tighten down both clamps to tip inlet tubes into stock exhaust.
- Step 5:** Place right tip, into tip inlet tube at desired position and fully tighten down tip clamp.
- Step 6:** Repeat process for left side tip.
- Step 7:** Align left and right tips coming out of the bumper cut outs, and fully tighten down both spherical clamps.
- Step 8:** Your install is now complete!
- Step 9:** It is recommended to re-tighten all exhaust components after the first 50-100 miles.

**Caution:** Allow time for your vehicle to cool down prior to installation. When working on or under your vehicle proceed with caution. Exhaust systems reach high temperatures and may cause serious burns. Wear protective safety equipment; eye goggles and gloves to ensure a safe installation. **aFe recommends professional installation on our products.**