



advanced FLOW engineering

Instruction Manual P/N: TR-5306B-R/ TR-5306B-D



Make: **Ford** Model: **Focus ST** Year: **2015-2016** Engine: **L4-2.0L (t) EcoBoost**



- Please read the entire instruction manual before proceeding.
- Ensure all components listed are present.
- If you are missing any of the components, call customer support at 951-493-7100.
- Ensure you have all necessary tools before proceeding.
- Do not attempt to work on your vehicle when the engine is hot.
- Disconnect the negative battery terminal before proceeding.
- Retain factory parts for future use.

Label	Qty.	Description	Part Number
A1	1	Air Filter (Pro DRY S)	21-91090 (Gray Media)
A2	1	Air Filter (Pro 5R)	24-91090 (Blue Media)
B	3	Clamp #048	03-50007
C	1	Clamp #044	03-50019
D	1	Isolation Mount: M6	03-50022
E	1	Screw, Hex Head: M6	03-50052
F	1	Nut, Hex: M6	03-50059
G	1	Isolation Mount: M8	03-50063
H	1	Washer, Flat: 24mm	03-50065
I	1	Washer, Flat: M6	03-50070
J	1	Nut, Hex: M8	03-50087
K	1	Seal, Trim (20" in.)	05-00072
L	1	Coupling, Silicone Hump	05-01245
M	1	Coupling, Silicone Reducer	05-01333
N	1	Tube #1 of 2	05-T5305B1
O	1	Tube #2 of 2	05-T5306B2
P	1	Housing	05-T5305B3

Installation will require the following tools:

10mm socket, pliers, ratchet, extension 8mm nut driver, 1/2" socket.

Note: Legal in California for use on race vehicles only. The use of this device on vehicles used on public streets or highways is strictly prohibited in California and others states that have adopted California emission regulations.



**Figure A****Refer to Figure A for Steps 1-2**

Step 1: Disconnect the MAP sensor harness (1) from the sensor.

Step 2: Remove engine cover (2) by pulling upwards on it.

NOTE: Picture shown of previous model.



Figure B

Refer to Figure B for Steps 3-6

Step 3: Pull the rubber tab off the intake air inlet duct (3), leaving the inlet ducts free moving.

Step 4: Remove the bolts (4) and stud (5) connecting the intake air tube to the valve cover.

Step 5: Loosen the clamps on OE elbow coupling connecting the air box to intake tube.

Step 6: Loosen the clamps on coupling connecting the turbo to the intake tube.

NOTE: Picture shown of previous model.

**Figure C****Refer to Figure C for Steps 7-10**

Step 7: Remove the elbow coupling.

Step 8: With an upward motion pull the OE air box out of the engine bay.

Step 9 Disconnect the crank case breather hose behind the intake tube and remove tube out the engine bay.

Step 10: Remove the second part of the OE intake tube connecting to the turbo.

NOTE: Picture shown of previous model.



Figure D

Refer to Figure D for Step 11

Step 11: Remove the bolt (7) to the ground wires and replace with the M8 isolation mount.

**Figure E****Refer to Figure E for Steps 12-14**

Step 12: Remove the OE air inlet duct (8) off the OE housing and install on the Takeda housing.

Step 13: Remove the OE mounting fitting (9) off the OE housing and install on the Takeda housing.

Step 14: Install aFe filter onto the aFe airbox housing along with trim seal. Make sure housing is secure in filter retention groove.

**Figure E****Refer to Figure E for Steps 19-23**

Step 19: Remove MAP sensor off OE airbox and install onto Takeada intake tube.

Step 20: Install the longer Takeda intake tube onto the reducer coupling and isolation mount, secure tube with the provided hardware.

Step 21: Pre-install the silicone hump coupler with clamps onto the short Takeda intake tube.

Step 22: Slide the short tube onto the Takeda air filter then rotate the tube to align with the other Takeda tube. Connect them with hump coupling and clamps.

Step 23: Re-connect the MAP sensor harness to the sensor.

NOTE: Picture shown of previous model.

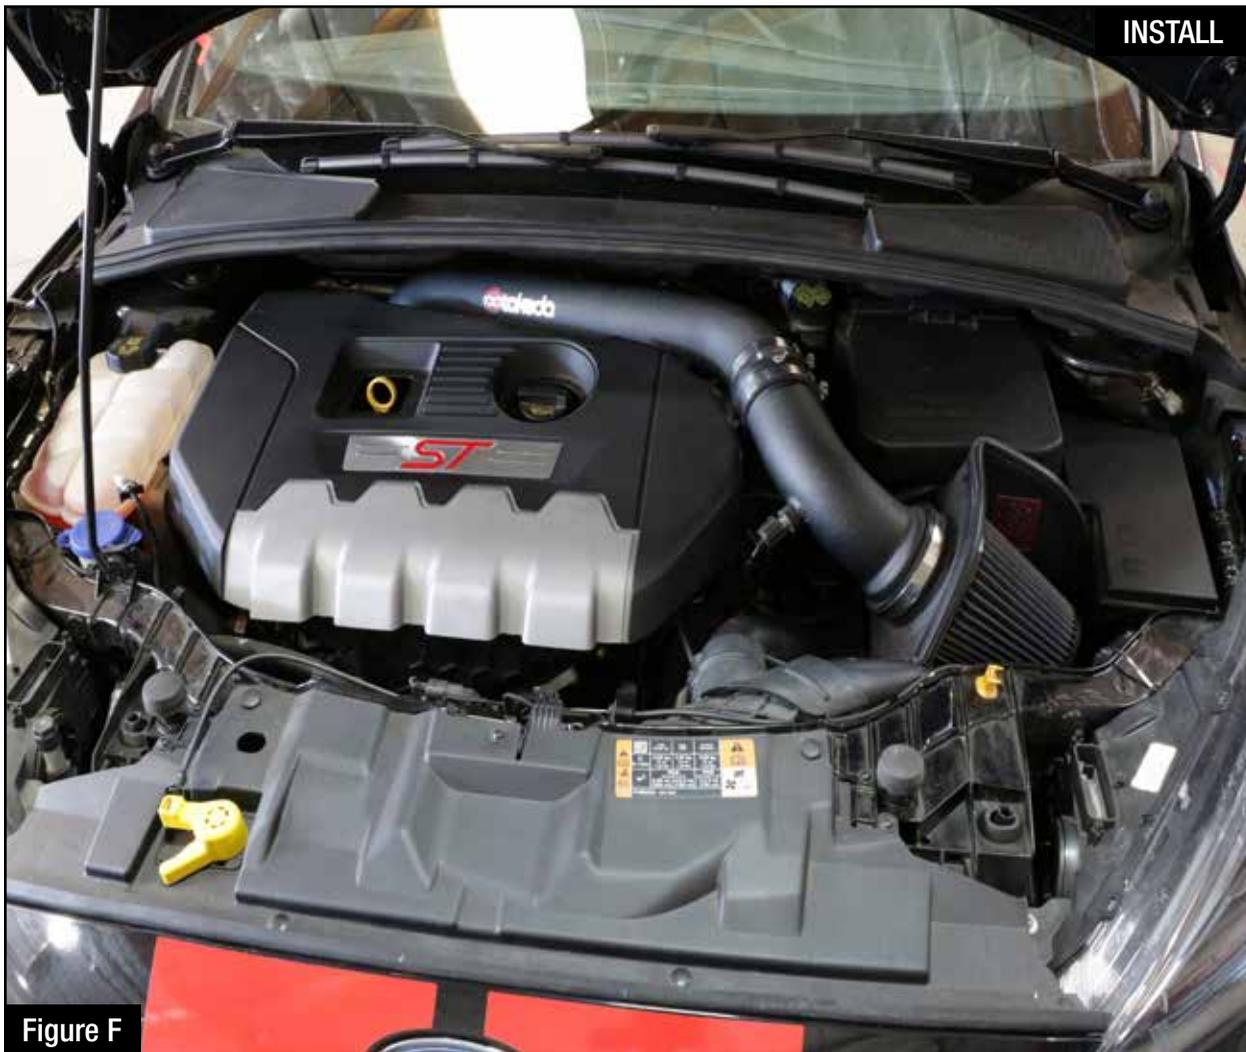


Figure F

Refer to Figure F for steps 23-25

Step 23: Tighten all clamps, nuts and bolts.

Step 24: Re-install the stud with the ball end back onto the valve cover.

Step 25: Install the engine cover back on and your installation is complete.

Thank you for choosing aFe Power.

NOTE: Check all bolts, clamps and connectors after 200 miles.



This page left blank intentionally.

This page left blank intentionally.



Pro DRY S Air Filter



P/N: 21-91090

Pro 5R Air Filter



P/N: 24-91090

Pro 5R Restore Kit



P/N: 90-50501

Pro DRY S Restore Kit



P/N: TP-7015C

Intake System Cover



P/N: TC-5305B

Intercooler Tubes



P/N: 46-20184-B (Black)
46-20184-R (Red)

Cat-Back Exhaust System



P/N: 49-33083-B (Blk Tips)
49-33083-P (Pol Tips)

Takeda T-Shirts



P/N: 40-30332 (M)
40-30333 (L)
40-30334 (XL)

To purchase any of the items above, view airflow charts, dyno graphs, photos, and video; please go to aFepower.com.

Warranty

General Terms:

- aFe warrants their products to be free from manufacturer's defects due to workmanship and material.
- This warranty applies only to the original purchaser of the product and is non-transferrable.
- Proof of purchase of the aFe product is required for all warranty claims.
- Warranty is valid provided aFe instructions for installation and/or cleaning were properly followed.
- Proper maintenance with regular inspections of product is required to insure warranty coverage.
- Damage due to improper installation, abuse, unauthorized repair or alteration is not warranted.
- Incidental or consequential damages or cost, including installation and removal of part, incurred due to failure of aFe product is not covered under this warranty.
- All warranty is limited to the repair and/or replacement of the aFe part. To request Return Goods Authorization ("RGA"), email RGA@afepower.com or call (951)493-7100. Upon receipt of the RGA, you must return the product to the address provided in the RGA, freight prepaid and accompanied with a dated proof of purchase and the RGA. Upon receipt of the defective product and upon verification of proof of purchase, aFe will either repair or replace the defective product within a reasonable time, not to exceed thirty days.

Product Category	P/N Prefix	Warranty duration
Direct OE Replacement Filters	10, 11, 30, 31, 71, 73	Life of the vehicle
Racing Filters	18	1 year
Universal	21, 24, 72, TF	2 years
Air Intake Systems	50, 51, 54, 55, 75, TR, TA, TL	2 years
Exhaust Systems	49	2 years
Intercoolers & Intercooler Tubes	46-2	2 years
Intake Manifolds	46-1	2 years
Differential Cover	46-7	Life of the vehicle
Exhaust Manifolds	46	2 years
Throttle Body Spacers	46-3	2 years
Fluid Filters	44	90 days
Pre-Filters	28	2 years
Heavy Duty OE Replacement	70	2 years
PowerSports OE Replacement	81, 87	2 years
PowerSports Intake Systems	85	2 years

No other warranty expressed or implied applies nor is any person or advanced FLOW engineering authorized to assume any other warranty. Some States do not allow the exclusion or limitation of incidental or consequential damages or do not allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from State to State.



advanced FLOW engineering, inc.
252 Granite Street Corona, CA 92879
TEL: 951.493.7100 • TECH: 951.493.7100 x23
E-Mail: Tech@aFepower.com