



aFe Silver Bullet

Throttle Body Spacer

Part Number

46-38003

INSTALLATION INSTRUCTIONS

VEHICLE APPLICATIONS

Year	Make	Model	Sub-Model	Engine	Fuel
1996-2002	Toyota	4Runner		L4 2.7L	Gas
1996-1998	Toyota	T100		L4 2.7L	Gas
1995-2004	Toyota	Tacoma		L4 2.4L	Gas
1995-2004	Toyota	Tacoma		L4 2.7L	Gas

1. Unbolt air cleaner assembly from passenger-side of engine. Unclamp air cleaner from throttle body. Remove air cleaner assembly.
2. Remove the two nuts and bolts that secure the throttle body to the intake manifold. Slide throttle body from the studs on intake. (Photo 1) Remove the two studs from the intake manifold. (NOTE: These studs will not be used for the installation of this throttle body spacer. Please keep in case vehicle is put back to stock.)
3. Place a gasket on both sides of the aFe Silver Bullet spacer and install between the throttle body and intake manifold. Secure onto the intake manifold using supplied M8 x 60mm screws and M8 washers. (Note that the engraved side of spacer should face toward throttle body). Torque the screws to 15 ft/lb.
4. Install air cleaner assembly back on the throttle body. Tighten clamp to throttle body. Install the two 25mm spacers in between the air cleaner assembly and engine-mounting bracket. (Photo 2) Use supplied M6 x 35mm screws and M6 washers to secure assembly to mounting bracket. Torque to 12 ft/lb.
5. Your installation is complete. (Photo 3)

NOTE: This part has been exempt by the California Air Resources Board (C.A.R.B.) and issued an Executive Order (E.O.). If part does not come with C.A.R.B. E.O. sticker already placed on device, it is necessary to place the sticker on or near the device on a smooth, clean surface. The C.A.R.B. E.O. sticker is required to pass the smog test inspections in the state of California.



Photo 1

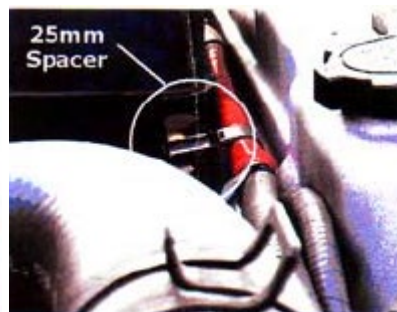


Photo 2



Photo 3

PARTS LIST

- 1 aFe Silver Bullet Throttle Body Spacer
- 2 Gaskets
- 4 M8 x 60mm Screws
- 4 M8 Flat Washers
- 2 25mm spacers
- 2 M6 x 35mm Screws
- 2 M6 Flat Washers

advanced FLOW engineering, Inc.

252 Granite Street, Corona, CA 92879

For TECHNICAL and INSTALLATION SUPPORT, please call 951-493-7185 M-F 7:00am-5:00pm PST; OR email Tech@afepower.com (send photos if helpful). All other calls, please use our main line at 951-493-7100

www.aFePower.com

Revised: 06-19-2020 CDS