



INSTALLATION INSTRUCTIONS

MAKE: Dodge
 MODEL: RAM 2500/3500
 YEAR: 1994-1997
 ENGINE: L6-5.9L (td) Cummins

Tailpipe Hanger Kit 49-02001BR



Parts Included:


- Bracket (1)
- Screws (2)
- Washers (2)
- Nuts (2)
- Isolation Mounts (2)

Tools Needed:


- Ratchet
- 9/16" Deep Socket
- 9/16" Wrench
- Center Punch
- Drill
- 3/8" Drill Bit

CAUTION: Allow time for your vehicle to cool down prior to installation. When working on or under your vehicle proceed with caution. Engine bays reach high temperatures and may cause serious burns. Wear protective safety equipment; eye goggles and gloves to ensure a safe installation. aFe recommends professional installation of this product as it involves removal of the turbocharger, intake manifold as well as opening the cooling and oil systems.

1. View from under looking up at the "Spare tire crossmember".

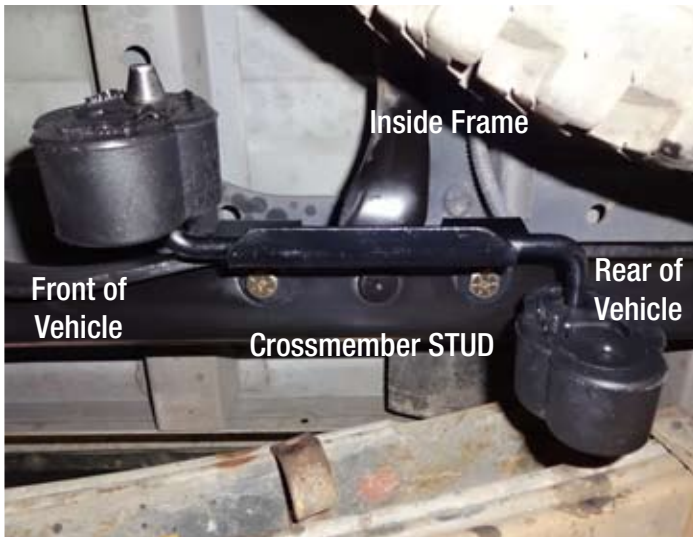

2. View from wheel well looking under frame mounting location.

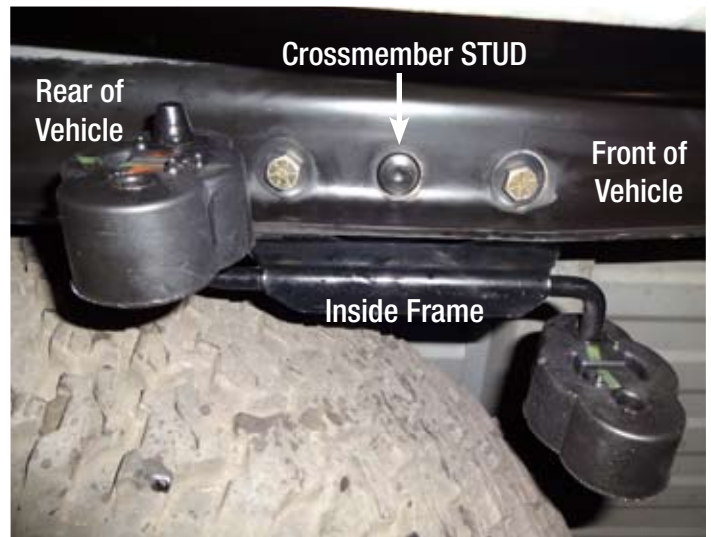

INSIDE FRAME "Cut Out Template"

