




# INSTALLATION INSTRUCTIONS

MAKE: FORD  
MODEL: MUSTANG  
YEAR: 2005-2009  
ENGINE: V6-4.0L


**Cat Back Dual Exhaust  
Stainless Steel  
49-43047**

**Note:** Requires V8 rear bumper cover (P/N 5R3Z17K835BAA) or cutting of OE rear bumper cover

**aFe recommends professional installation on our products.**

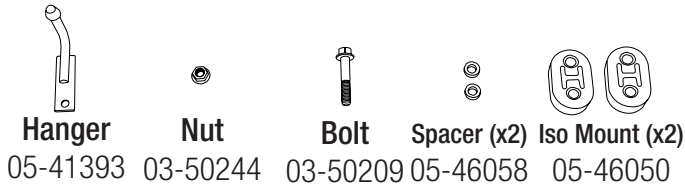


**Hanger** 05-41393  
**Nut** 03-50244  
**Bolt** 03-50209  
**Spacer (x2)** 05-46058  
**Iso Mount (x2)** 05-46050

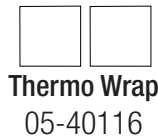

**Thermo Wrap**  
05-40116




**Nut**  
03-50208

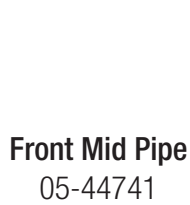

**Front Mid Pipe**  
05-44741



**Band Clamp**  
05-41061



**Band Clamp**  
05-41061



**Left Mid Pipe**  
05-44742




**Right Mid Pipe**  
05-44743



**Band Clamp**  
05-41061




**Band Clamp**  
05-41061

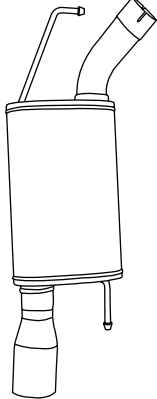

**Left Side Tail Pipe**  
05-44745



**Zip Ties (x4)**  
05-60167

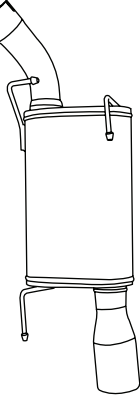

**Right Side Tail Pipe**  
05-44747

**Caution:** Allow time for your vehicle to cool down prior to installation. When working on or under your vehicle proceed with caution. Exhaust systems reach high temperatures and may cause serious burns. Wear protective safety equipment; eye goggles and gloves to ensure a safe installation.

**Step 1:** (Read Instructions prior to installation) Secure vehicle on jack stands (Refer to your manual for specified jack stand positions).

**Step 2:** Loosen stock muffler band clamp and remove the (x3) muffler rubber hanger mounts off chassis, then remove stock muffler section.

**Step 3:** Loosen the band clamp securing the stock mid pipe to the catalytic converter pipes and remove stock mid pipe.

**Step 4:** Remove rubber hanger mounts off the stock muffler section and transfer onto the aFe right side muffler section.

**Step 5:** Install the supplied 7/16-14 x 2 1/2" length flange bolt, (x1) rubber hanger mount, (x2) aluminum spacers and 7/16-14 flange nut to the chassis and tighten.



**Step 6:** Install the supplied hanger rod assembly, (x1) rubber hanger mount and 8 x 1.25 bolt to the chassis and tighten.



**Step 7:** Install the (x2) 3"x3" heat shield adhesive on the fuel line using (x4) zip ties.



**Step 8:** Install the aFe Front Mid Pipe using the original band clamp from step 4 but do not tighten.

**Step 9:** Using (x2) aFe band clamps, install the left and right side aFe Mid Pipes but do not tighten the band clamps.

**Step 10:** Using (x1) aFe 2.5" band clamp, install the right side aFe Muffler onto the chassis and right side mid pipe. Tighten the rubber hanger mounts back on the chassis but do not tighten the band clamp.

**Step 11:** Using (x1) aFe 2.5" band clamp, install the left side aFe Muffler onto the newly installed rubber hanger mounts and onto the left side mid pipe but do not tighten.

**Step 12:** Align the aFe Exhaust System and then tighten all band clamps. Re-check all your work. Check system and retighten after 150 miles.

**Note: It is normal for your exhaust system to emit smoke for the first few minutes upon initial start-up.**