

advanced FLOW engineering

Dynamic Air Scoop D.A.S

Instruction Manual P/N: 54-76108-S

Make: Nissan

Model: Titan

Year: 2017-2022

Engine: V8-5.6L



- Please read the entire instruction manual before proceeding.
- Ensure all components listed are present.
- If you are missing any of the components, call customer support at 951-493-7185.
- Ensure you have all necessary tools before proceeding.
- Do not attempt to work on your vehicle when the engine is hot.

Retain factory parts for future use.


Label	Qty.	Description	Part Number
A	1	Scoop, Rotomold	05-76108B3

Installation will require the following tools:
12mm socket, socket wrench.

Warranty Information available at: <https://afepower.com/contact#warranty>

Emissions Disclaimer:

This product is not currently CARB exempt and is not available for purchase in California or for use on any vehicle registered with the California Department of Motor Vehicles.

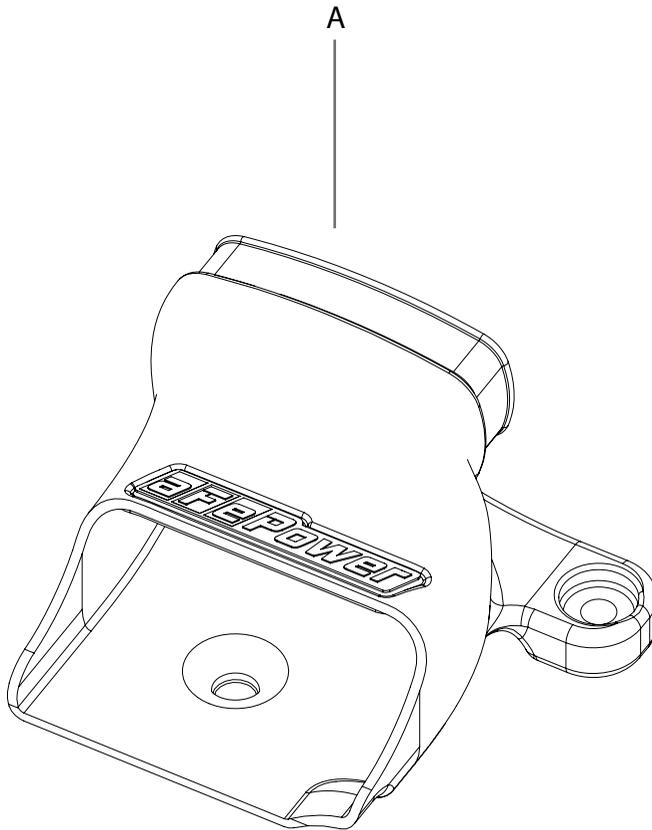

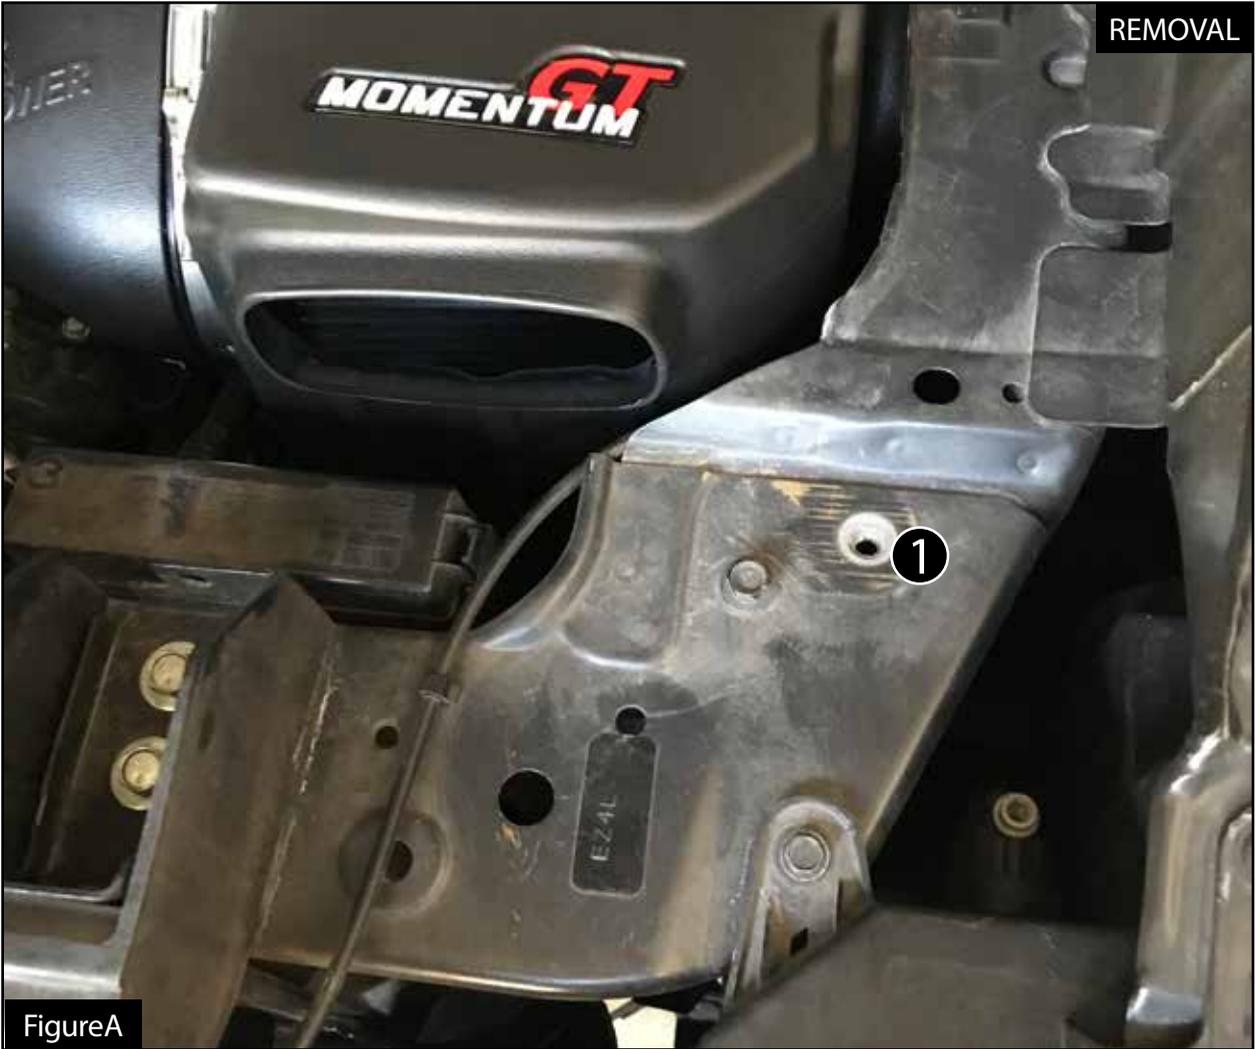


Figure A

Refer to Figure A for Step 1

Step 1: Remove the OE bolt ①.



Figure B

Refer to Figure B for Steps 2-3

Step 2: While holding the scoop snug against the aFe housing, slip the scoop bottom nipple to the truck's crossmember. (2)

Step 3: Secure the scoop with the bolt removed in Step 1. (3)

Your installation is now complete. Thank you for choosing aFe POWER!



PAGE LEFT BLANK INTENTIONALLY

PAGE LEFT BLANK INTENTIONALLY



advanced FLOW engineering, inc.

252 Granite Street Corona, CA 92879

<https://afepower.com/contact>