




# INSTALLATION INSTRUCTIONS

Cat-Back Exhaust

MAKE: Ford  
MODEL: Bronco  
YEAR: 2021-2023  
ENGINE: L4-2.3L(t)/V6-2.7L(tt)

49-43135

NOTE: Fits 2 Door and 4 Door models

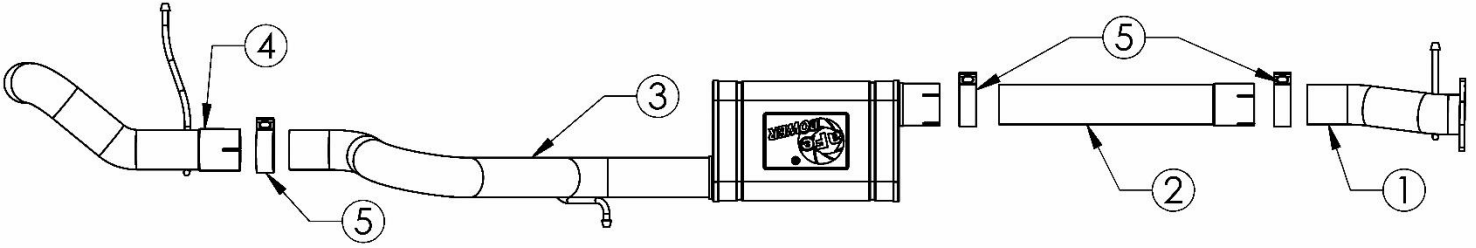

Item	Description	Part Number	Quantity
1	Inlet Pipe	05-244227	1
2	Mid-Pipe	05-244228	1
3	Over-Axle Pipe	05-224229	1
4	Tail Pipe	05-244231	1
5	Clamp, Band: 3"	05-41055	3

**aFe POWER recommends professional installation on this product.** Thoroughly inspect the aFe POWER exhaust system to make sure there is no damage from shipping (if damage is noted, immediately contact aFe POWER customer service). Allow time for your vehicle to cool down prior to installation. When working on your vehicle proceed with caution. Wear protective safety equipment; eye goggles and gloves to ensure a safe installation.

Install band clamps to proper torque specifications of 40-45 ft-lb.

Install V-band clamps with anti-seize lubricant and hand tighten only to torque specifications of 10-15 ft-lb.





## INSTALLATION INSTRUCTIONS

Cat-Back Exhaust

**MAKE:** Ford  
**MODEL:** Bronco  
**YEAR:** 2021-2022  
**ENGINE:** L4-2.3L(t)/V6-2.7L(tt)

49-43135

**NOTE: Fits 2 Door and 4 Door models**

1. **(Read instructions prior to installation.)** It is recommended to not fully tighten the exhaust until it has been fully installed. Leave loose for adjustability.
2. Secure vehicle on jack stands (refer to your manual for specified jack stand positions).
3. For faster installation, spread out the parts of the exhaust alongside your vehicle as shown in the diagram above.
4. Secure the stock exhaust with jack/stands.
5. Loosen the O.E. clamp on the O.E. Over-Axle.
6. Slide the two rear hangers from the Rubber Isolator Mounts holding the O.E. Muffler.
7. Remove the O.E. Muffler from vehicle.
8. Loosen (x2) Nuts on the O.E. Flange.
9. Slide the hangers holding the O.E. Front Pipe from the Rubber Isolator Mounts.
10. Remove O.E. Front Pipe from vehicle.
11. Install aFe Power Front Pipe using O.E. hardware and gasket. Install hangers into O.E. Rubber Isolator Mounts.
12. Slide aFe Power Mid-Pipe into the aFe Power Front Pipe and secure with provided 3" band clamp. **(ONLY FOR 4 DOOR MODELS).**
13. Slide aFe Power Over-Axle Pipe into the **aFe Power Front Pipe for 2 DOOR MODELS ONLY** or **into the aFe Power Mid-Pipe for 4 DOOR MODELS ONLY** and secure with provided 3" band clamp. Install hangers into Rubber Isolator Mounts.
14. Slide aFe Power Tail Pipe into the aFe Power Over-Axle Pipe and secure with provided 3" band clamp.
15. Install the hanger from aFe Tail Pipe into O.E. Rubber Isolator Mount.
16. Ensure that all the components of the aFe POWER exhaust system are aligned and are at a safe clearance from all wires, hoses, brake lines, body parts, and tires.
17. Start from the front of the aFe exhaust system and evenly tighten all clamps and fasteners.
18. Start the vehicle and check for any leaks. If any leaks are found, determine cause and repair as necessary.
19. Remove vehicle from jacks stands.
20. It is recommended to re-tighten all clamps and hardware after 50-100 miles.