

***advanced FLOW engineering*** Terra Guard Tub Rail Covers

**Instruction Manual** P/N: 79-25001

---

Make: Jeep	Model: Wrangler JL	Year: 2018-2022	Engine: I4-2.0L (t)
Make: Jeep	Model: Wrangler JL	Year: 2018-2022	Engine: V6-3.6L
Make: Jeep	Model: Wrangler JL	Year: 2020-2022	Engine: V6-3.0L (td)
Make: Jeep	Model: Wrangler JL	Year: 2021-2022	Engine: V8-6.4L




- Please read the entire instruction manual before proceeding.
- Ensure all components listed are present.
- For technical support please call 951-493-7185.
- Ensure you have all necessary tools before proceeding.
- Do not attempt to work on your vehicle when the engine is hot.
- Retain factory parts for future use.

Label	Qty.	Description	Part Number
A	1	Tub Rail Cover, Driver Side	05-7925001B1
B	1	Tub Rail Cover, Passenger Side	05-7925001B2
C	2	Terra Guard Badge (Pre-Installed)	06-00238

**Installation will require the following tools:**

T-50 Torx bit and driver. TT-40 Torx Bit if installing with optional security hardware kit.

**Emissions Disclaimer:** This product does not require a CARB EO#

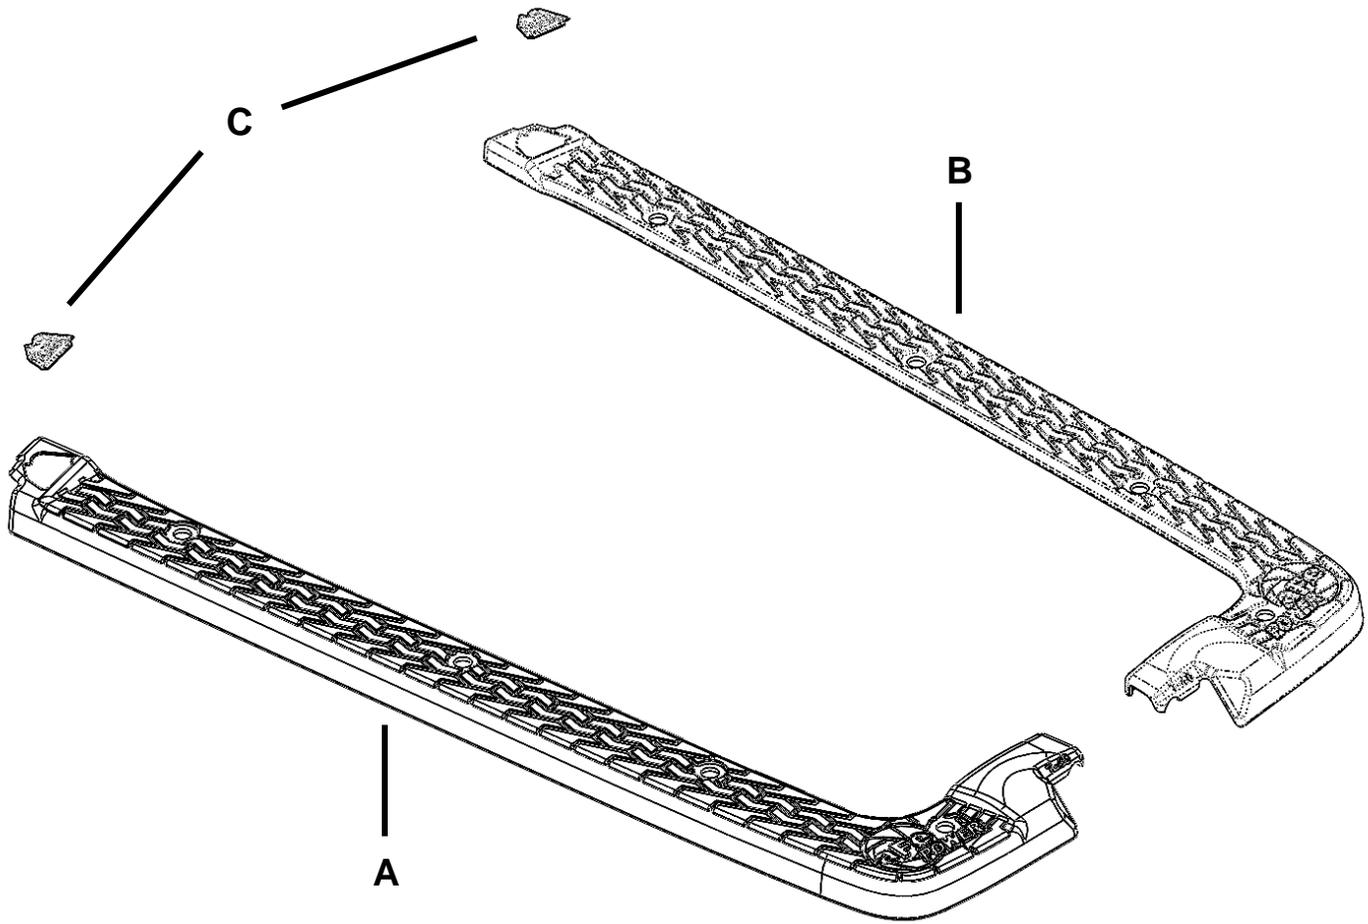

**Figure A****Refer to Figure A for Steps 1-2**

Step 1: Starting on the driver's side, from the inside of the vehicle, unclip and remove the driver's side freedom panel. Store it in a safe location.

Step 2: Moving to the passenger's side, from the inside of the vehicle, unclip and remove the passenger's side freedom panel. Store it in a safe location.

**Figure B****Refer to Figure B for Step 3**

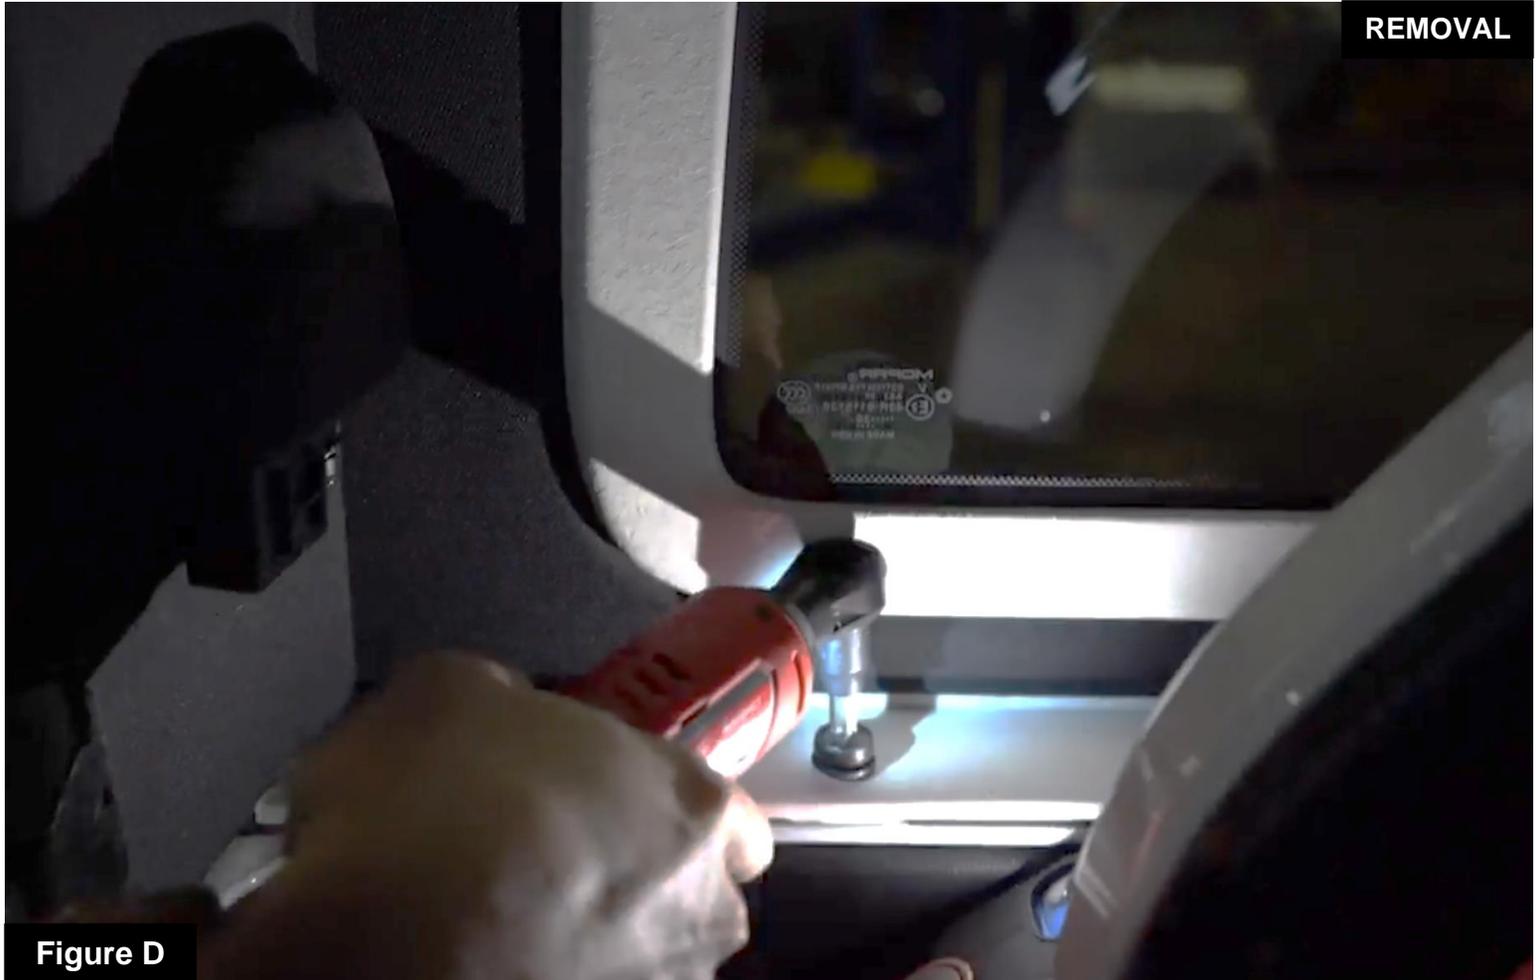
Step 3: Using a T-50 Torx bit and driver, remove the (2) two screws from the front of the hard top located on the roll bar rails. There is (1) one screw on each side. Save these bolts for later.



Figure C

**Refer to Figure C for Step 4**

Step 4: From the back of the vehicle on the driver's side, disconnect the electrical connector and water line from the hard top and clip them into their respective storage locations.

**Figure D****Refer to Figure D for Step 5**

Step 5: From the back of the vehicle, using a T-50 Torx bit and driver, remove the (6) six bolts that secure the hard top to the tub rail of the Jeep. Save these bolts for later.

**Figure E****Refer to Figure E for Steps 6-7**

Step 6: With help from someone else, carefully lift the hard top off the vehicle and store it in a safe location.

Step 7: Gently wipe down the surface of the bare surface of the tub rail once the hard top is removed.



**Figure F**

**Refer to Figure F for Step 8**

Step 8: Place the new Terra Guard Tub Rail Cover into position over the tub rail on the passenger side.

**Figure G****Refer to Figure G for Steps 9-10**

Step 9: Using the bolts removed in previous steps, loosely install (4) four bolts into the corresponding holes in the Tub Rail Cover. Leave bolts loose for alignment.

Step 10: Align the end of the Tub Rail Cover with the door jam as shown, then tighten the bolts with a T-50 torx bit and driver.


**Note:** If you purchased the optional Stainless Steel Security Hardware Kit, use the new bolts and washers at this time. The new bolts will require a TT-40 torx bit (included) and a driver. Your original bolts can be stored in the tray in the rear of the Jeep under the storage cover.



Figure H

**Refer to Figure H for Step 11**

Step 11: Your installation is now complete!

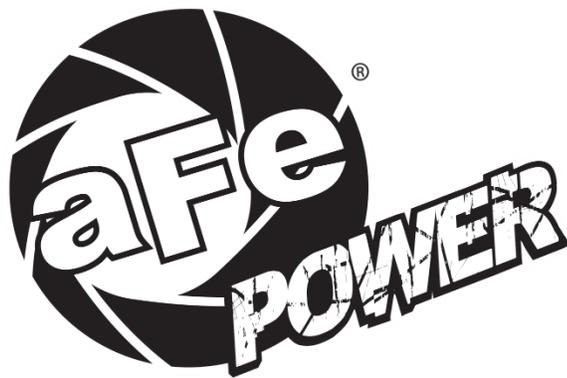

***advanced FLOW engineering, inc.***

252 Granite Street Corona, CA 92879

TECH: 951.493.7185

E-Mail: [Tech@aFepower.com](mailto:Tech@aFepower.com)

P/N: 79-25001