




# INSTALLATION INSTRUCTIONS

Cat-Back Exhaust

49-37026

MAKE: Hyundai  
MODEL: Elantra N  
YEAR: 2022-2023  
ENGINE: L4-2.0(t)

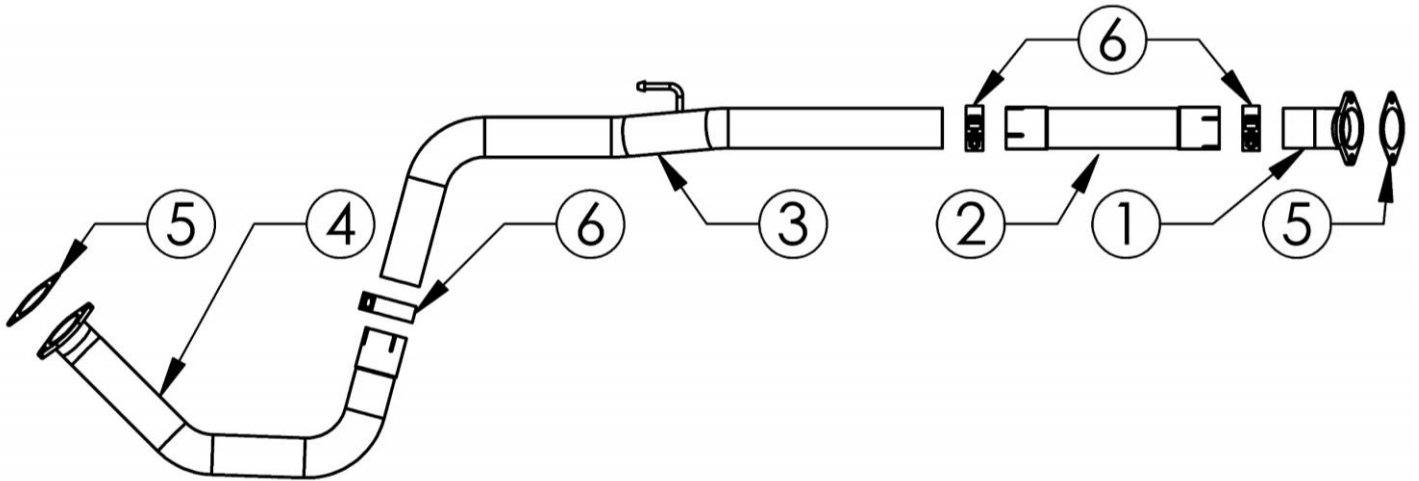

| Item | Description      | Part Number | Quantity |
|------|------------------|-------------|----------|
| 1    | Front Pipe       | 05-245279   | 1        |
| 2    | Resonator Delete | 05-145401   | 1        |
| 3    | Mid-Pipe         | 05-245280   | 1        |
| 4    | Connection Pipe  | 05-245281   | 1        |
| 5    | Gasket           | 05-46400    | 2        |
| 6    | Clamp, Band: 3"  | 05-41055    | 3        |

**aFe POWER recommends professional installation on this product.** Thoroughly inspect the aFe POWER exhaust system to make sure there is no damage from shipping (if damage is noted, immediately contact aFe POWER customer service). Allow time for your vehicle to cool down prior to installation. When working on your vehicle proceed with caution. Wear protective safety equipment; eye goggles and gloves to ensure a safe installation.

Install band clamps to proper torque specifications of 40-45 ft-lb.

Install V-band clamps with anti-seize lubricant and hand tighten only to torque specifications of 10-15 ft-lb.





## INSTALLATION INSTRUCTIONS

Cat-Back Exhaust

49-37026

**MAKE:** Hyundai  
**MODEL:** Elantra N  
**YEAR:** 2022-2023  
**ENGINE:** L4-2.0(t)

---

1. **(Read instructions prior to installation.)** It is recommended to not fully tighten the exhaust until it has been fully installed. Leave loose for adjustability.
2. Secure vehicle on jack stands (refer to your manual for specified jack stand positions).
3. For faster installation, spread out the parts of the exhaust alongside your vehicle as shown in the diagram above.
4. Secure the stock exhaust with jack/stands.
5. Loosen the (x2) nuts securing the O.E. Muffler Assembly to the O.E. Mid-Pipe. Retain hardware for installation.
6. Loosen the (x2) nuts securing the O.E. Mid-Pipe to the downpipe. Retain hardware for installation.
7. Remove the hanger from Rubber Isolation Mount on the O.E. Mid-Pipe and remove the O.E. Mid-Pipe from the vehicle.
8. Using the provided gasket and the O.E. (x2) nuts, install the Takeda Front Pipe.
9. Slide Takeda Front Pipe into the Takeda Resonator Delete Pipe and secure with provided 3" Band Clamp.
10. Slide Takeda Mid-Pipe into the Takeda Resonator Delete Pipe and secure with provided 3" Band Clamp. Install hanger into Rubber Isolator Mount.
11. Slide Takeda Connection Pipe into the Takeda Mid-Pipe and secure with provided 3" Band Clamp.
12. Install the Takeda Connection pipe to the O.E. Muffler Assembly using the provided gasket and O.E. (x2) nuts.
13. Ensure that all the components of the aFe POWER exhaust system are aligned and are at a safe clearance from all wires, hoses, brake lines, body parts, and tires.
14. Start from the front of the aFe exhaust system and evenly tighten all clamps and fasteners.
15. Start the vehicle and check for any leaks. If any leaks are found, determine cause and repair as necessary.
16. Remove vehicle from jacks stands.
17. It is recommended to re-tighten all clamps and hardware after 50-100 miles.