

Front Seat Covers for 2016+ Toyota Tacoma

Install Instructions



Parts

A.



B.



Parts Included:

- A. 2 Head Rest Covers (Driver and Passenger)
- B. 2 Seat Base Covers (Driver and Passenger)
- C. 2 Seat Back Covers (Driver and Passenger)

Tools Required:

beginning the install.

Plyers, Phillips Head Screwdriver

Remove all parts from the box and unwrap completely.

Time:

Approx 2 hours.





Install Instructions for PRP Seats Front Seat Covers for 2016+Toyota Tacoma



 Place the covers out in the sun. This will allow the material to warm up and get rid of most creases formed from being in the box. This also makes it easier to fit the covers over the seat.



2. Start by removing the headrest from the seats. Push in both release buttons and lift the headrest up and out.



3. Front Cover Install

Make sure you have the correct cover for the driver or passenger side. HINT - the airbag flap should be on the outside shoulder next to the door. Slide the cover over the seat, so that it is mostly in place. Then push the back flap through the center of the seat.



4. Tuck the cover under the Headrest Bases
At the top of the seat, there are cutouts
for the headrest bases. Use your fingers to
push the cover underneath the plastic
bases. Start at one corner and work your
way around.

NOTE - If you have trouble with it, you can use a plastic tucking took to carefully force the vinyl underneath the plastic.





The top portion of the OEM cover has a flap that wraps around the back & bottom of the seat - Blocking access to the flap you just pushed through.

Undo this flap by un-hooking the two clips underneath. Then take this flap and fold it up, and underneath the PRP Cover.



6. Connect the Center Flaps

Pull hard on both flaps so that the cover sits tight on the seat. Then connect both hook & loop strips to each other.

HINT- use wide nose pliers to pull it extra tight. Then connect the flaps together with the hook and loop strips. If you have any wrinkles or bulges, work the cover around so that it is sitting correctly. You may also need to undo and re-tighten the hook & loop.



7. Tuck-in the Airbag Pocket

The airbag on the shoulder has a mesh liner that needs to be tucked underneath the vinyl, so that it sits flat on the front of the seat. start at the top, and use your hands to tuck this mesh into & under the cover.

NOTE - Make sure the mesh lies flat on the seat to ensure that the airbag will open properly in the case of an accident.



8. **Bottom Cover Install**

Make sure you have the correct cover (driver or passenger). Driver will have an additional cut-out on the side for the lumbar roller adjuster. Place the cover on and push the back flap through the center of the seat.

Wrap the draw strings around the sides of the seat.



Install Instructions for PRP Seats Front Seat Covers for 2016+ Toyota Tacoma



9. Tuck the cover under the Adjustment Levers
On the Driver side - Pull hard on the round
plastic roller adjuster and it will pop off. Place
the cut-out in the cover over the opening,
then after the cover is completely set - pop
the plastic handle back on.



10a. Tuck the edges underneath the side skirt
Option 1 -You can use your hands or a tucking
tool to push the edge of the cover underneath
the plastic skirt on the side of the seat (so that
the seat cover now sits flush and underneath
the plastic). Once that is done, take the string
and feed it down below the recline handle, so
that it pops out underneath the seat. Once the
end of the string is underneath the the seat,
pull it towards the back.



10b. Tuck the edges underneath the side skirt Option 2 - We found it much easier to remove this plastic skirt entirely to install. Use a Phillips head screwdriver to remove the screw on the back of the seat. Then pull the plastic skirt off and slide it forward. There is a push-pin in the center of the plastic, then a sliding bracket in the front that requires you to slide the skirt forward to release.



10b. Pull the flap through and tie off

Pull the cover down around the seat so its sitting correctly, then tuck the back corner underneath the recline handle. Take the draw string and wrap it around to the back of the seat



Install Instructions for PRP Seats Front Seat Covers for 2016+ Toyota Tacoma



11. Pull the cover tight from the back Pull the flap through the center of the seat and pull tight.

HINT- use wide nose pliers to pull it extra

Feed the strings through the loops in the flap, then pull them together.



12. Tie Off the Draw String

Use pliers to pull the strings tight and hold them in place while you tie them off. After it's tied off, and you are happy with the fitment of the cover, cut off any excess string.

NOTE - Try to get the drawstring as tight as you can. It will allow for less movement in the cover, and give the cover a better looking fit overall.



13. Re-install Side Skirt and Roller Adjuster

If you removed the side skirt, place it back on the seat. (Slide the front hook backwards until it locks in place. Then line up and push on the pushclip in the center of the seat. Then reinstall the screw at the back with a Phillips head screwdriver.

Take the Plastic Roller Adjuster and push hard until it pops back into place.




14. Headrest Cover Install

Place the cover on top of the headrest. (the Rubber PRP label should go on the back of the headrest). Pull the cover down and over the headrest - use your fingers to depress the foam on the sides to make this easier.



Install Instructions for PRP Seats Front Seat Covers for 2016+ Toyota Tacoma



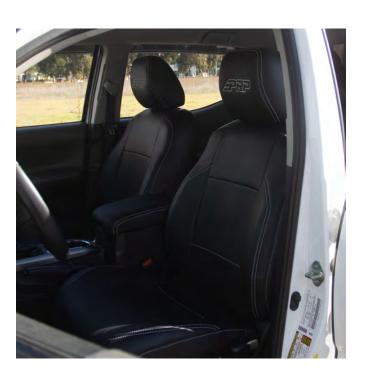

15. Re-Adjust and Attach Cover

Once you have the cover completely over the headrest, push the material around and adjust the cover as needed.
On the bottom side - connect the two longer straps on the side of the headrest first, then connect the front and back flaps.

Finally, reinstall the headrest back onto the seat.

16. Repeat Steps 1-15 on the Passenger Side Repeat all the same steps for the passenger side cover.

... And You're All Done!

If you have any questions or experience issues, please contact your retail outlet first for help. However, the staff at PRP Seats is always happy to assist you.

1-800-317-6253. customerservice@prpseats.com Thank you! Ride safe!

