Front Seat Covers for 2016+ Toyota Tacoma

Install Instructions



Parts

A.



B.



C.



Read through all of the instructions completely before beginning the install.

Parts Included:

A. 2 Head Rest Covers (Driver and Passenger)
B. 2 Seat Base Covers (Driver and Passenger)
C. 2 Seat Back Covers (Driver and Passenger)

Tools Required:

Plyers, Phillips Head Screwdriver

Remove all parts from the box and unwrap completely.

Time:

Approx 2 hours.



1. Place the covers out in the sun. This will allow the material to warm up and get rid of most creases formed from being in the box. This also makes it easier to fit the covers over the seat.



2. Start by removing the headrest from the seats. Push in both release buttons and lift the headrest up and out.



3. **Front Cover Install**

   Make sure you have the correct cover for the driver or passenger side. HINT - the airbag flap should be on the outside shoulder next to the door. Slide the cover over the seat, so that it is mostly in place. Then push the back flap through the center of the seat.



4. <u>Tuck the cover under the Headrest Bases</u>
   At the top of the seat, there are cutouts for the headrest bases. Use your fingers to push the cover underneath the plastic bases. Start at one corner and work your way around.

   NOTE - If you have trouble with it, you can use a plastic tucking took to carefully force the vinyl underneath the plastic.

PRP BUILT FOR OFF-ROAD

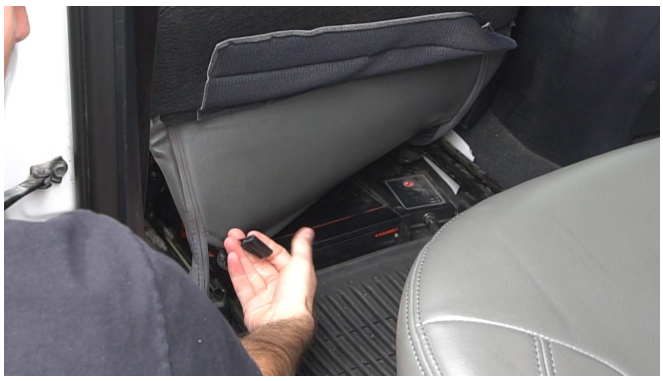

5. 6OIPPLUF 0&MBBQOUFCBDLPGTFBU
5IFBQQSPQSJBUFCBDL CPPN PG
UIFBBTTFNCMZ IMPDLJOHBDDFTTPSJFTMBBQVKVTU
QTIFUSPVHI
6OEPJUTMBBQZOIPPLJOHUPXBSEMJTQ
VOEFSOFBUFIFOBLFJUTMBBQOEEEMEJVQ
BOEVOEFSOFBUU F1318WFS



$OOFDUFSOESMBQ
1VMMIBSEPOCPUMBBQTPBUFDPWFSTJTU JHIU
POUFTFBSIFODPOOFDDPUPPLMPPQ
TSJQFBDIPUFS
) 5 VTF XEFOPTFQJFSTPJ QMMJESBUHIU
5IFO DPOOFDUMBQ PHFUFSXUIPPL
BOEMPPQSJQV IBWF BOXJOLMFT PS
CVMHFTXSL UF DPWFSBSPVOETPUBU JU JT
TJUH DPSSFDMZPVNBZ BMTPOFFEPJ VOEP
BOE SFUHIEO UFIPPLMPPQ

5VDLJOUF JSCBH1PDLFU
5IFBJSCBHPOUFTIPVMEFSIBTB NFTIMJOFSUBU
OFFETPCFVDLFEVOEFSOFBUFWJOZM TPUBU
JTUTMBPOUFSPOUGTFBU TBSUBUFPQ
BOEVTFZVSIBOETPVDLJT NFTIJOPJ
VOEFSUFDPWFS
/05&LFTVSFUNFTIMJFTMBPOUFTFBPJ
FOTVSFUBUFBJSCBHXMMPEQSPESMZOUF
DBTFPBOBDDJEFOU

#PNBWFSTOTBMM
. BLFTVSFZVIBWFUFDPSSFDDPWFSESJWFSPS
BTTFOHFS9WFSXMMIBWFBOBEEJUPOBMDVPVU
POUFTJEFPGDPW FSPSUFMFDSJDBEKVTFS
CVPOT
0OUESJWFSTJEFHPPUFCBDLPGTFBBOE
SFNPWFUF 1IJMMJTBETDSFXUFMETF
MBTTDTJEFTLJSUMBDF5IFOVTFBTDSFXSJWFS
PPPBMMUFCVPOT:PVDBOUFOPQT
TLJSPBOEPSXSEPSFNPWFJU



9. Use a flat head screwdriver to pop off all the adjuster buttons. Then remove the two screws hidden behind the buttons. You can then pop the entire side skirt off and forward to remove it.



10. Place the cover on and push the back flap through the center of the seat. Wrap the draw strings around the sides of the seat. Tuck the edge of the covers underneath the plastic of the front skirt.

11. On the driver seat, you need to feed the draw string underneath the buttons, wires and run the end through the finger slot in the cover.



12. Tuck the back corner of the cover underneath the recline handle. Take the draw string and wrap it around to the back of the seat.

13. Go around and make sure the cover is sitting nicely on the seat. You may need to adjust and move the cover around to make it sit evenly.



PRP BUILT FOR OFF-ROAD



11. Pull the cover tight from the back
Pull the flap through the center of the seat and pull tight.
HINT- use wide nose pliers to pull it extra tight.
Feed the strings through the loops in the flap, then pull them together.



12. Tie Off the Draw String
Use pliers to pull the strings tight and hold them in place while you tie them off. After it's tied off, and you are happy with the fitment of the cover, cut off any excess string.
NOTE - Try to get the drawstring as tight as you can. It will allow for less movement in the cover, and give the cover a better looking fit overall.



13. Re-install Side Skirt and Adjuster Buttons
Place the side skirt back on the seat. (Slide the front hook backwards until it locks in place. Then line up and push on the push-clip in the center of the seat. Then reinstall the screw at the back with a Phillips head screwdriver. Reinstall both screws by the buttons, then pop the plastic buttons back on.



14. **Headrest Cover Install**
Place the cover on top of the headrest. (the Rubber PRP label should go on the back of the headrest). Pull the cover down and over the headrest - use your fingers to depress the foam on the sides to make this easier.

PRP BUILT FOR OFF-ROAD



15. Re-Adjust and Attach Cover
Once you have the cover completely over the headrest, push the material around and adjust the cover as needed.
On the bottom side - connect the two longer straps on the side of the headrest first, then connect the front and back flaps.

Finally, reinstall the headrest back onto the seat.



16. Repeat Steps 1-15 on the Passenger Side
Repeat all the same steps for the passenger side cover.

... And You're All Done!

If you have any questions or experience issues, please contact your retail outlet first for help. However, the staff at PRP Seats is always happy to assist you.

1-800-317-6253.
customerservice@prpseats.com
Thank you! Ride safe!

PRP BUILT FOR OFF-ROAD