




# INSTALLATION INSTRUCTIONS

Muffler Delete Exhaust

MAKE: GM  
MODEL: Silverado  
YEAR: 2019-2023  
ENGINE: V8-5.3L

49C44121NM

**NOTE: Fits the V8-5.3L Single and Dual Exhaust**

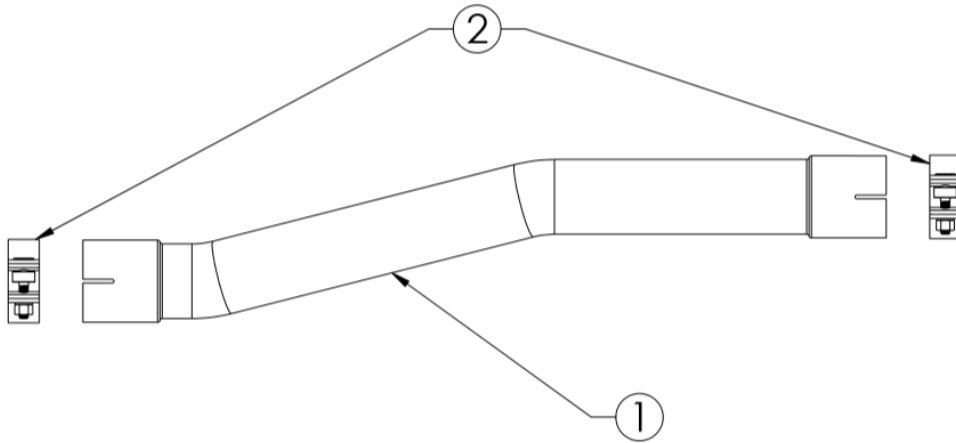

| Item | Description      | Part Number | Quantity |
|------|------------------|-------------|----------|
| 1    | Front Pipe       | 05-144869   | 1        |
| 2    | 2.75" Band Clamp | 05-41160    | 2        |

**aFe POWER recommends professional installation on this product.** Thoroughly inspect the aFe POWER exhaust system to make sure there is no damage from shipping (if damage is noted, immediately contact aFe POWER customer service). Allow time for your vehicle to cool down prior to installation. When working on your vehicle proceed with caution. Wear protective safety equipment; eye goggles and gloves to ensure a safe installation.

Install band clamps to proper torque specifications of 40-45 ft-lb.





## INSTALLATION INSTRUCTIONS

Muffler Delete Exhaust

MAKE: GM  
MODEL: Silverado  
YEAR: 2019-2022  
ENGINE: V8-5.3L

49C44121NM

**NOTE: Fits the V8-5.3L Single and Dual Exhaust**

**(Read instructions prior to installation.)** It is recommended to not fully tighten the exhaust until it has been fully installed. Leave loose for adjustability.

1. Secure vehicle on jack stands (refer to your manual for specified jack stand positions).
2. For faster installation, spread out the parts of the exhaust alongside your vehicle as shown in the diagram above.
3. Secure the stock exhaust with jack/stands.
4. This system will require cutting the O.E Exhaust.
5. Using a marker, mark a line at the front of the muffler as close as you can to the muffler and behind the valve as shown in the image below.
6. Mark a second line 2.75" from the weld line behind the muffler as shown in the image below.
7. Cut exhaust system at both lines and remove the O.E. muffler.
8. Now remove the back half of the O.E. exhaust.
9. Install the aFe POWER Front Pipe using the provided band clamp.
10. Re-install the back half of the O.E. exhaust
11. Ensure that all the components of the aFe POWER exhaust system are aligned and are at a safe clearance from all wires, hoses, brake lines, body parts, and tires.
12. Start from the front of the aFe exhaust system and evenly tighten all clamps and fasteners.
13. Start the vehicle and check for any leaks. If any leaks are found, determine cause and repair as necessary.
14. Remove vehicle from jack stands.
15. It is recommended to re-tighten all clamps and hardware after 50-100 miles.

