



## *advanced FLOW engineering*

### **Instruction Manual**

P/N: 77-84014

**SCORCHER BLUE POWER MODULE**

Make: <b>Chevrolet</b>	Model: <b>Silverado 1500</b>	Year: <b>2020-2022</b>	Engine: <b>L6-3.0L (td)</b>
Make: <b>GMC</b>	Model: <b>Sierra 1500</b>	Year: <b>2020-2022</b>	Engine: <b>L6-3.0L (td)</b>
Make: <b>Cadillac</b>	Model: <b>Escalade</b>	Year: <b>2021-2023</b>	Engine: <b>L6-3.0L (td)</b>
Make: <b>Chevrolet</b>	Model: <b>Suburban</b>	Year: <b>2021-2023</b>	Engine: <b>L6-3.0L (td)</b>
Make: <b>Chevrolet</b>	Model: <b>Tahoe</b>	Year: <b>2021-2023</b>	Engine: <b>L6-3.0L (td)</b>
Make: <b>GMC</b>	Model: <b>Yukon</b>	Year: <b>2021-2023</b>	Engine: <b>L6-3.0L (td)</b>
Make: <b>GMC</b>	Model: <b>Yukon XL</b>	Year: <b>2021-2023</b>	Engine: <b>L6-3.0L (td)</b>



**THIS IS A HIGH-PERFORMANCE PRODUCT:** Do not use this product until you have carefully read the following agreement and installation instruction. This sets forth the terms and conditions for the use of this product. The installation of this product indicates that the BUYER has read and understands this agreement and accepts its terms and conditions.

**DISCLAIMER OF WARRANTY AND LIMITATION OF LIABILITY:** Advanced FLOW Engineering, Inc. (also known as aFe or aFe POWER) and its successors, distributors, jobbers, and dealers (hereafter “SELLER”) shall in no way be responsible for the product’s improper use and service. It is the installer’s responsibility to check for proper installation and if in doubt, contact the manufacturer. The SELLER assumes no liability regarding the improper installation or misapplication of its products. BUYER acknowledges it has had the opportunity to fully inspect the product. Accordingly, BUYER acknowledges that the product is being sold in “AS IS/WHERE IS” condition. SELLER shall not be held liable for special, indirect, incidental or consequential damages of any nature with respect to the products (including, without limitation, lost profits, lost sales, loss of production, property damage, personal injury or loss or damage resulting from interruption or failure in operation of the products) and BUYER hereby expressly waives and disclaims all such liability claims. The BUYER acknowledges and agrees that the disclaimer of liability contained herein is a material term of the sale of the product and, to the fullest extent permitted by law, BUYER shall defend, indemnify and hold SELLER harmless from any and all claims, demands, causes of action, controversies, liabilities, fines, losses, costs and expenses (including, but not limited to attorneys’ fees, expert witness expenses and litigation expenses) arising from or related to SELLER’s products.

**Before proceeding with the installation:**

- Please read the entire instruction manual before proceeding.
- Ensure all components listed are present.
- If you are missing any of the components, call customer support at 951-493-7185.
- Ensure you have all necessary tools before proceeding. Do not attempt to work on your vehicle when the engine is hot.

Warranty Information available at <https://afepower.com/contact#warranty>

**Emission Disclaimer:** This product is not currently CARB exempt and is not available for purchase in California or for use on any vehicle registered with the California Department of Motor Vehicles.



Label	Qty.	Description	Part Number
A	1	Module	R77-84014
B	1	LED Switch	05-70029
C	1	Bypass Plug	05-70017
D	1	Harness	AFE-10-249
E	2	Velcro (2" Inches)	05-01244
F	5	Cable Ties	05-60167
G	2	Double Sided Tape	07-90001





# SLEEP MODE


Figure A

## Refer to Figure A for Step 1

Step 1: Before installing your aFe POWER module, you will have to place your vehicle's ECU in sleep mode. In order to do this, you will need to do the following:

- If the engine is cold: open the hood, close the doors, lock the car and wait 30 seconds.
- If the engine is warm: open the hood, close the doors, lock the car and wait 20 minutes.
- If the engine is warm and you can't wait 20 minutes: disconnect the battery.

 **Note: Do NOT open doors or start vehicle while one of the sensors is disconnected. This could create a check engine light**

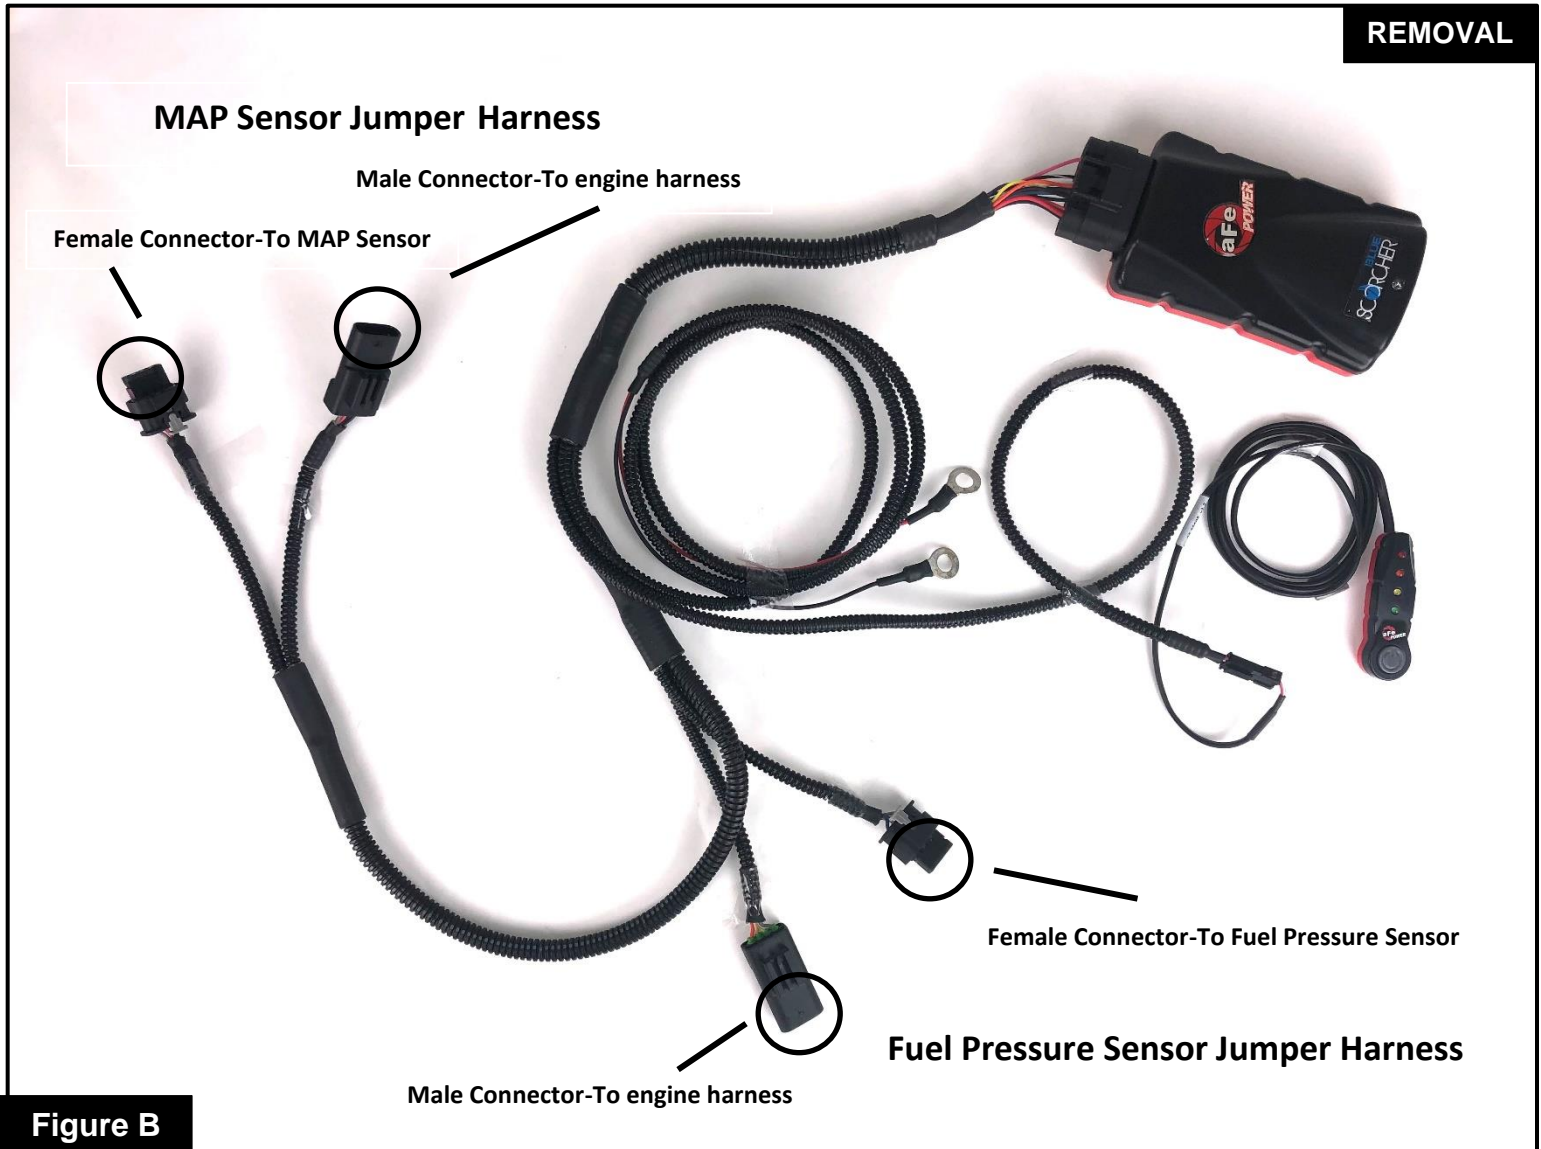

**Figure B**

**Refer to Figure B for Step 2**

Step 2: Refer to the diagram to identify the connectors and their corresponding sensors that they plug into.


- The Fuel Pressure sensor jumper harness will be the shorter set of wires. It has a 4 wires connector.
- The MAP sensor jumper harness will be the longer set of wires. It has a 4 wires connector.



**Refer to Figure C for Steps 3-4**

Step 3: Remove the engine cover by removing the oil cap and the 10mm bolt.

Step 4: Re-install the oil cap to make sure that small parts cannot fall in while installing the Scorcher BLUE Power Module.

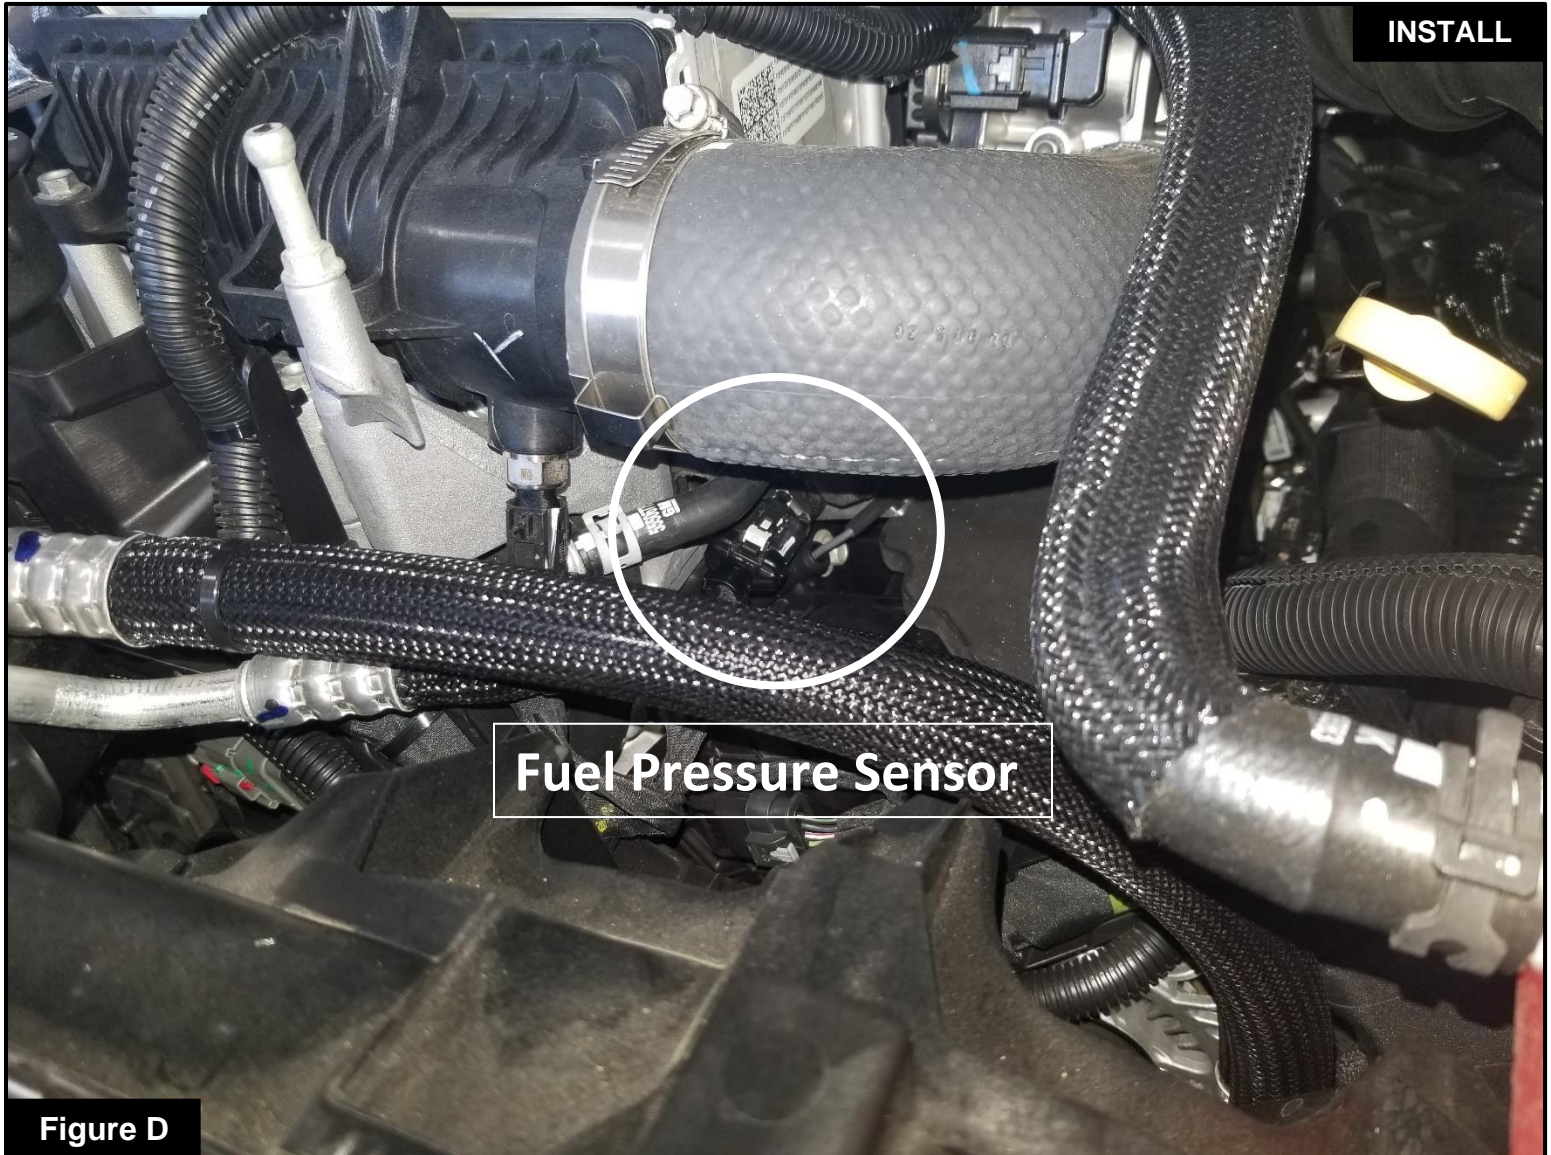

**Refer to Figure D for Steps 5-7**

Step 5: Locate the Fuel Pressure Sensor. It is underneath the intercooler pipe.

Step 6: Disconnect the Fuel Pressure Sensor by pulling back on the locking tab and pressing down on the clip while sliding the connector out.

Step 7: Locate the Fuel Pressure Sensor harness on the aFe POWER harness. Plug the female connector of the aFe POWER harness into the Fuel Pressure Sensor, then take the male connector of the aFe POWER harness and connect to the female connector of the engine harness.

**Figure E****Refer to Figure E for Step 8**

Step 8: Check with the picture and make sure that both the male and female sides of the aFe POWER harness is plugged in and the locking tabs are slid back into place.



**Make sure that the connections are fully engaged. Usually, connectors make a snapping sound when fully engaged.**






**Figure F**

**Refer to Figure F for Steps 9-11**

Step 9: Disconnect the Mass Airflow Sensor attached to the intake tube.

Step 10: Loosen clamps that attaches the intake tube to the air filter housing and the turbo inlet tube.

Step 11: Remove the intake tube and top of the factory air box to gain access to the MAP sensor.

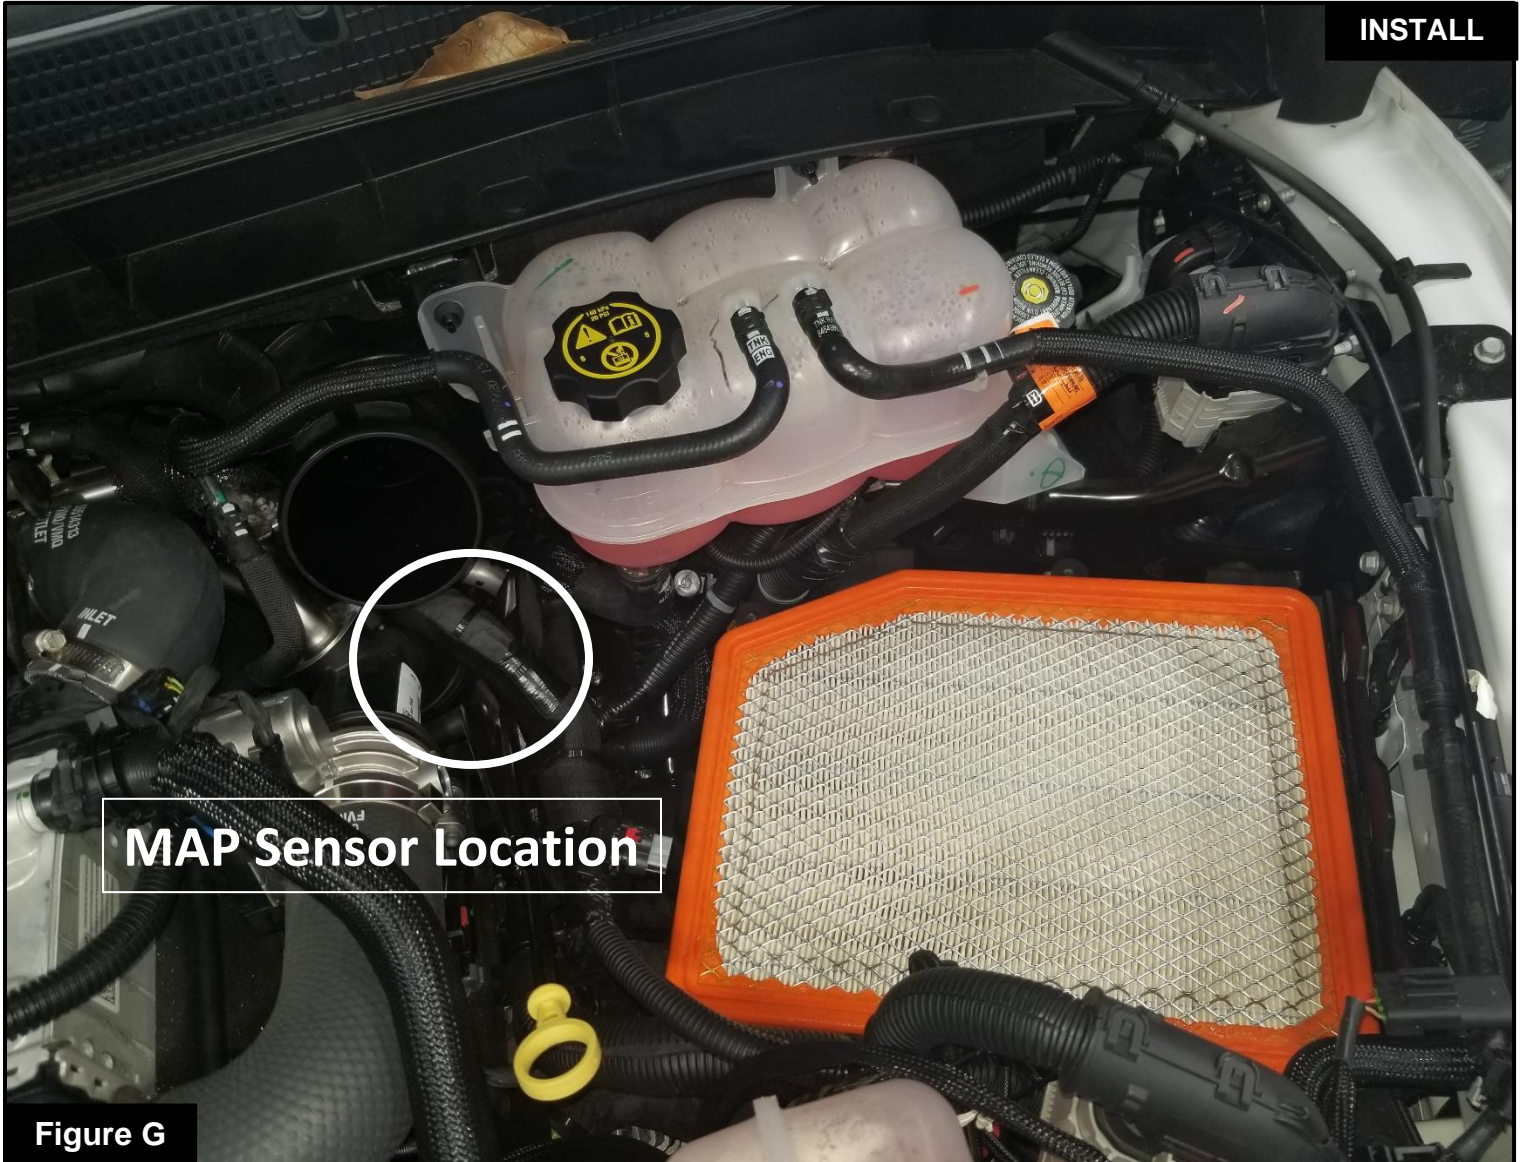**Figure G****Refer to Figure G for Step 12**

Step 12: Locate the MAP Sensor. The MAP sensor is located on top of the intake manifold towards the firewall side of the engine bay. To reach the connector for the MAP sensor, follow the wire loom to the right of the aluminum tubing.



**MAP Sensor Location**


**Figure H**

**Refer to Figure H for Step 13**

Step 13: If you are having trouble reaching the MAP sensor due to the tight fit, the coolant reservoir can be moved out of the way to get more clearance.



**Please note: the MAP sensor and connector will be surrounded by insulation foam and the sensor/connector itself is located in the cutout of the foam.**

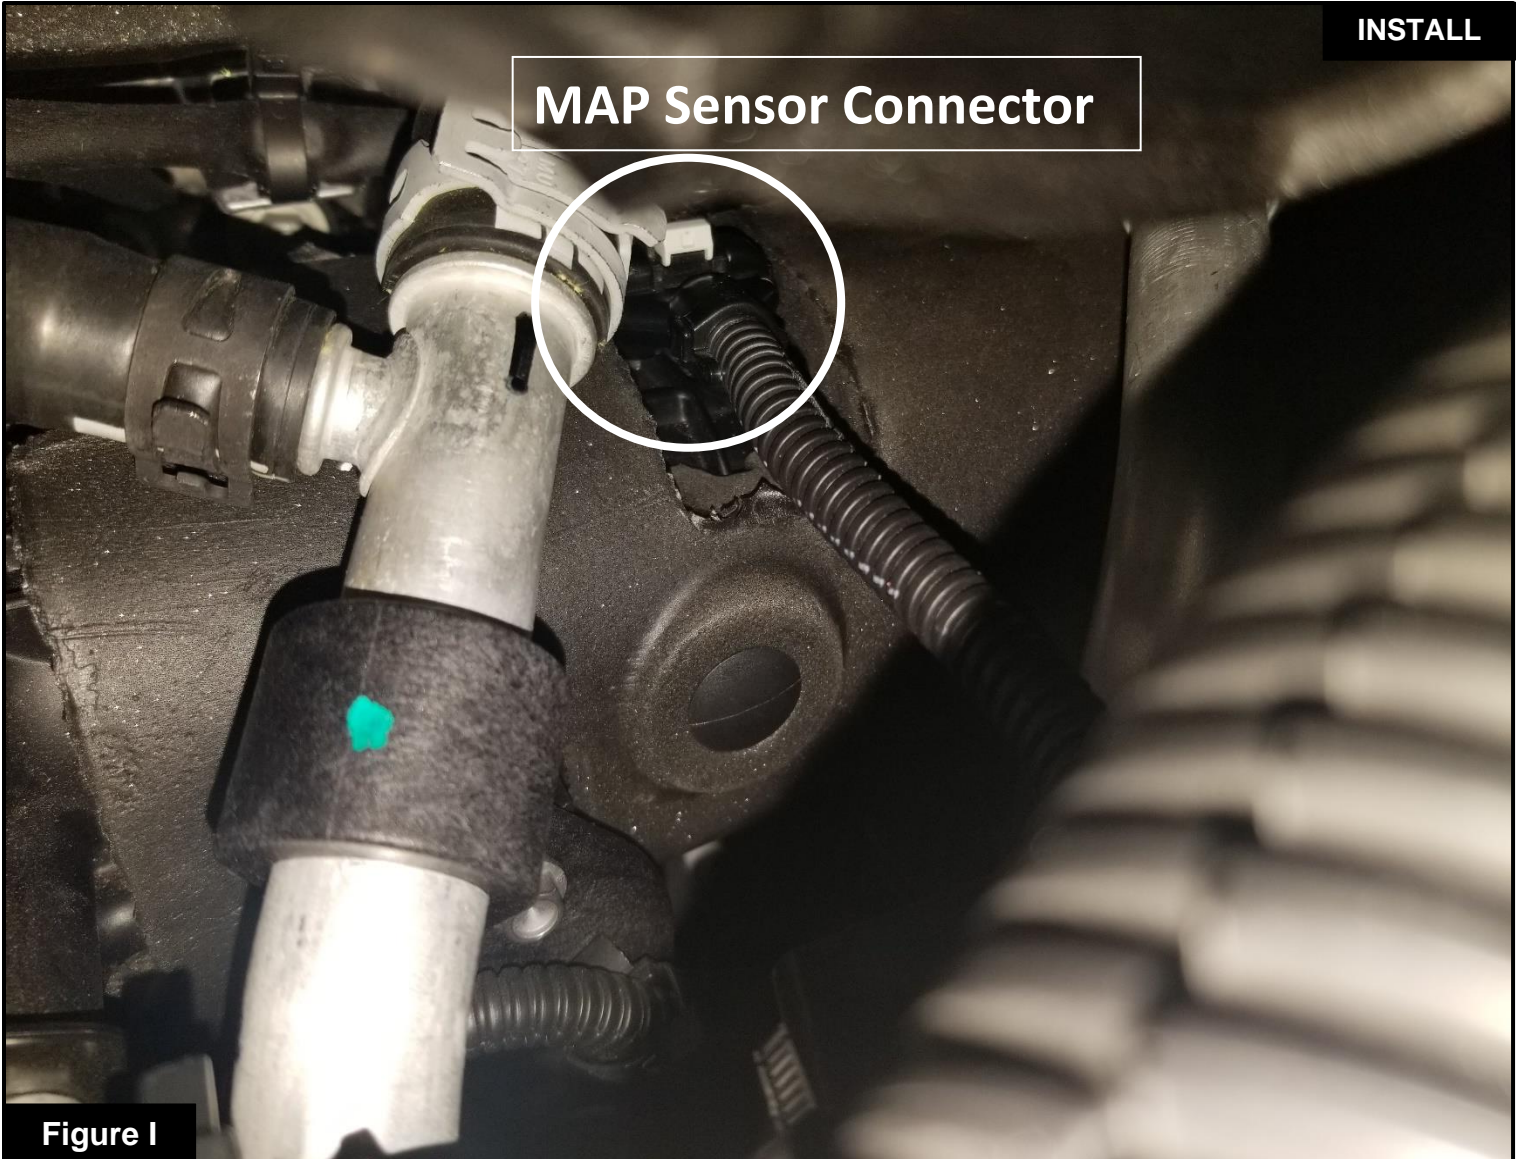**MAP Sensor Connector****Figure I****Refer to Figure I for Steps 14-15**

Step 14: Disconnect the MAP Sensor by pulling back on the locking tab and pressing down on the clip while sliding the connector out.

Step 15: Locate the MAP Sensor harness on the aFe POWER harness. Plug the female connector of the aFe POWER harness into the MAP Sensor, then take the male connector of the aFe POWER harness and connect to the female connector of the engine harness.

**Figure J****Refer to Figure J for Step 16**

Step 16: Check with the picture and make sure that both the male and female sides of the aFe POWER harness is plugged in and the locking tabs are slid back into place.



**Make sure that the connections are fully engaged. Usually, connectors make a snapping sound when fully engaged.**



**Figure K**

**Refer to Figure K for Steps 17-21**

Step 17: Reinstall the coolant reservoir (If moved).

Step 18: Reinstall the air filter housing and the intake tube.

Step 19: Reconnect the Mass Airflow Sensor harness.

Step 20: Remove the oil filler cap in order to reinstall the engine cover.

Step 21: Reinstall the engine cover along with the oil cap and the 10mm bolt.






**Figure M**

**Refer to Figure M for Steps 24-25**

Step 24: Mount the Scorch Blue module on top of the fuse box using the supplied Velcro.

Step 25: Connect the harness from the aFe POWER harness to the Scorch Blue Module. Use the provided cable ties to secure the harness away from extreme heat and moving parts.

 **If the vehicle needs to be jump-started, the module will have to be disconnected from the harness, and the bypass plug installed in place of the module. This is to protect the Scorch Blue module from any damage that may occur when jump-starting.**

**The doors can now be opened to install the LED Switch. (Optional if using the Bluetooth App.)**




**Figure N****Refer to Figure N for Steps 26-27 (Optional)**

Step 26: Carefully route the switch behind the steering wheel cover

Step 27: Mount the switch on an open, flat surface using the included double-sided tape.

**Note: Installation of the LED switch is optional if using the Bluetooth app.**

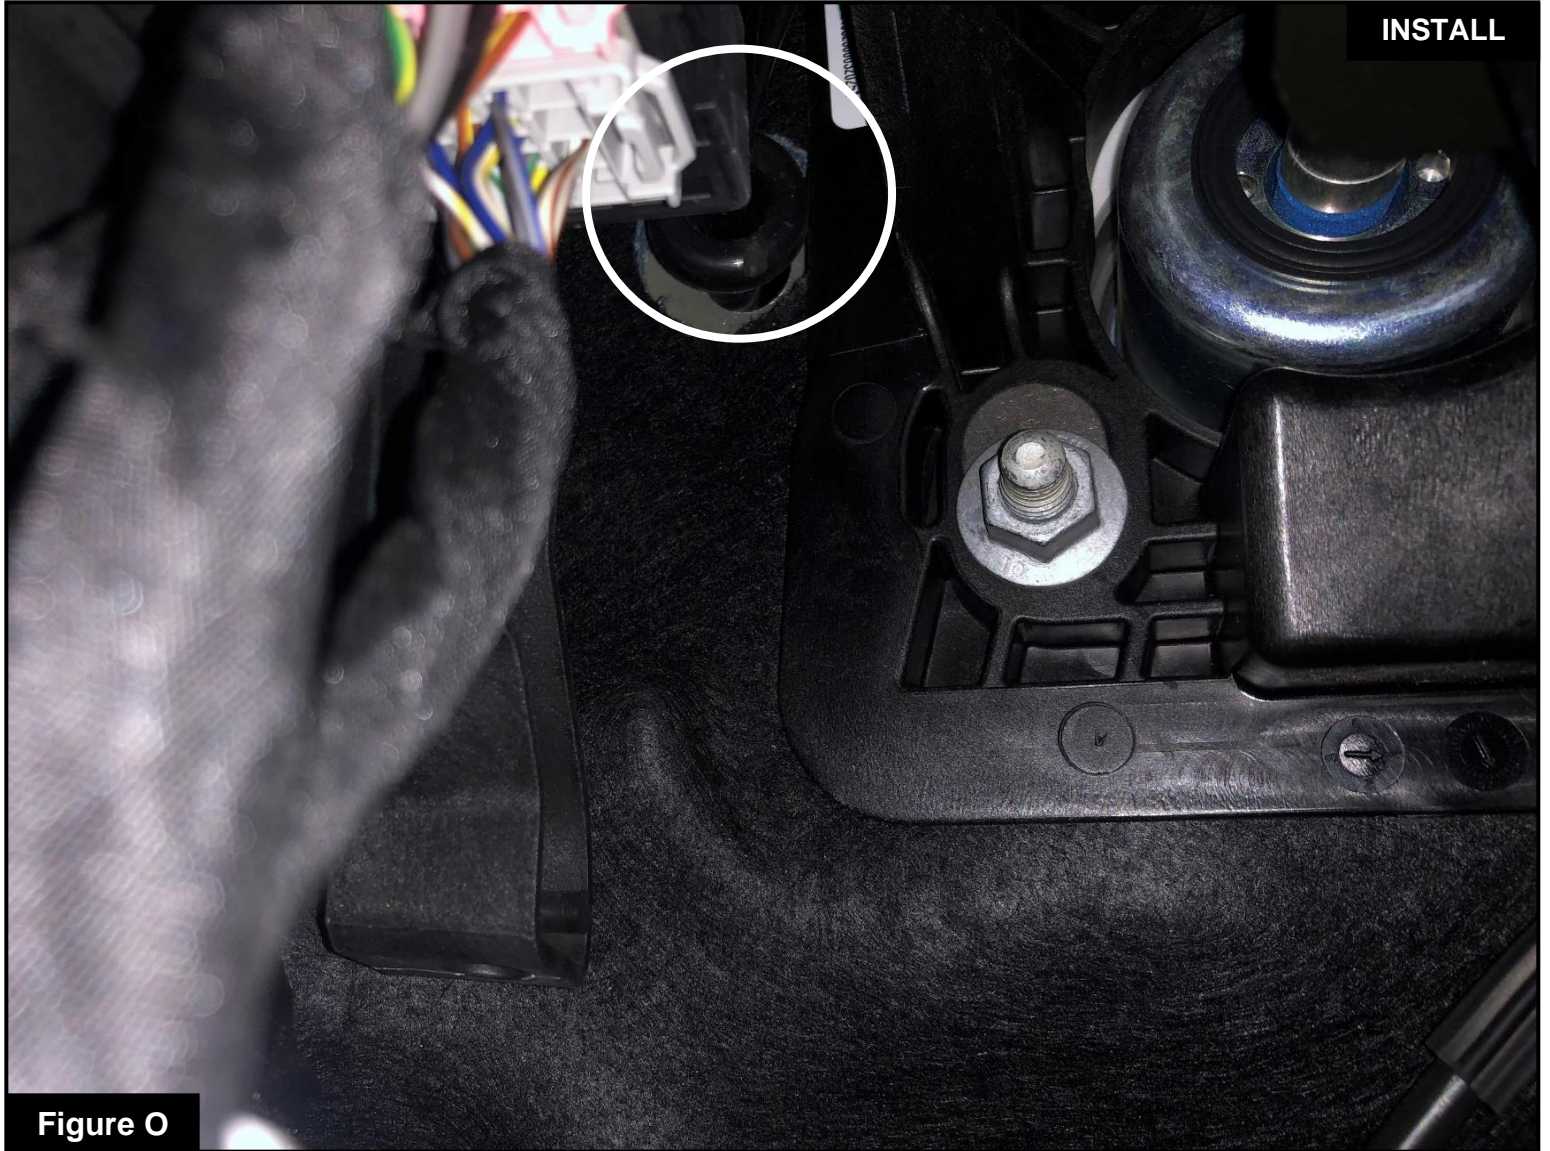**Figure O****Refer to Figure O for Steps 28-30 (Optional)**

Step 28: Locate the grommet for the hood release cable inside of the cabin's driver side footwell and slightly pull it to the side in order to route the LED switch.

Step 29: Route the connector for the LED switch out to the engine bay using this hole.

Step 30: Connect the LED switch to the aFe POWER harness in the engine compartment.

**Figure P****Refer to Figure P for Steps 31-32 (Optional)**

Step 31: Plug the end of the LED switch cable to the aFe POWER harness inside the engine compartment.

Step 32: Secure all wires away from any extreme heat and moving parts with the provided zip ties. Make sure all connections are secured and fully engaged.

**The installation of the module itself is now complete. Keep reading the installation instructions to learn how to use all of its features.**



**Figure Q**

**Refer to Figure Q (Picture is for reference)**

The blue LED light will start flashing once the module is connected to the car and the ECU is on. The blue LED will become solid if the module gets connected through Bluetooth to a device.



**Figure R**

**Refer to Figure R (LED Switch)**

When turning on the vehicle, each LED will flash, and it will stop at its last setting. The LED on the switch represents the different levels of power.

- Green LED: Stock
- Yellow LED: Sport
- Orange LED: Sport+
- Red LED: Race

Use the grey button to select the desired setting. Power adjustments can be done at any time while the unit is on. The LED switch can be used at the same time as the Bluetooth App.

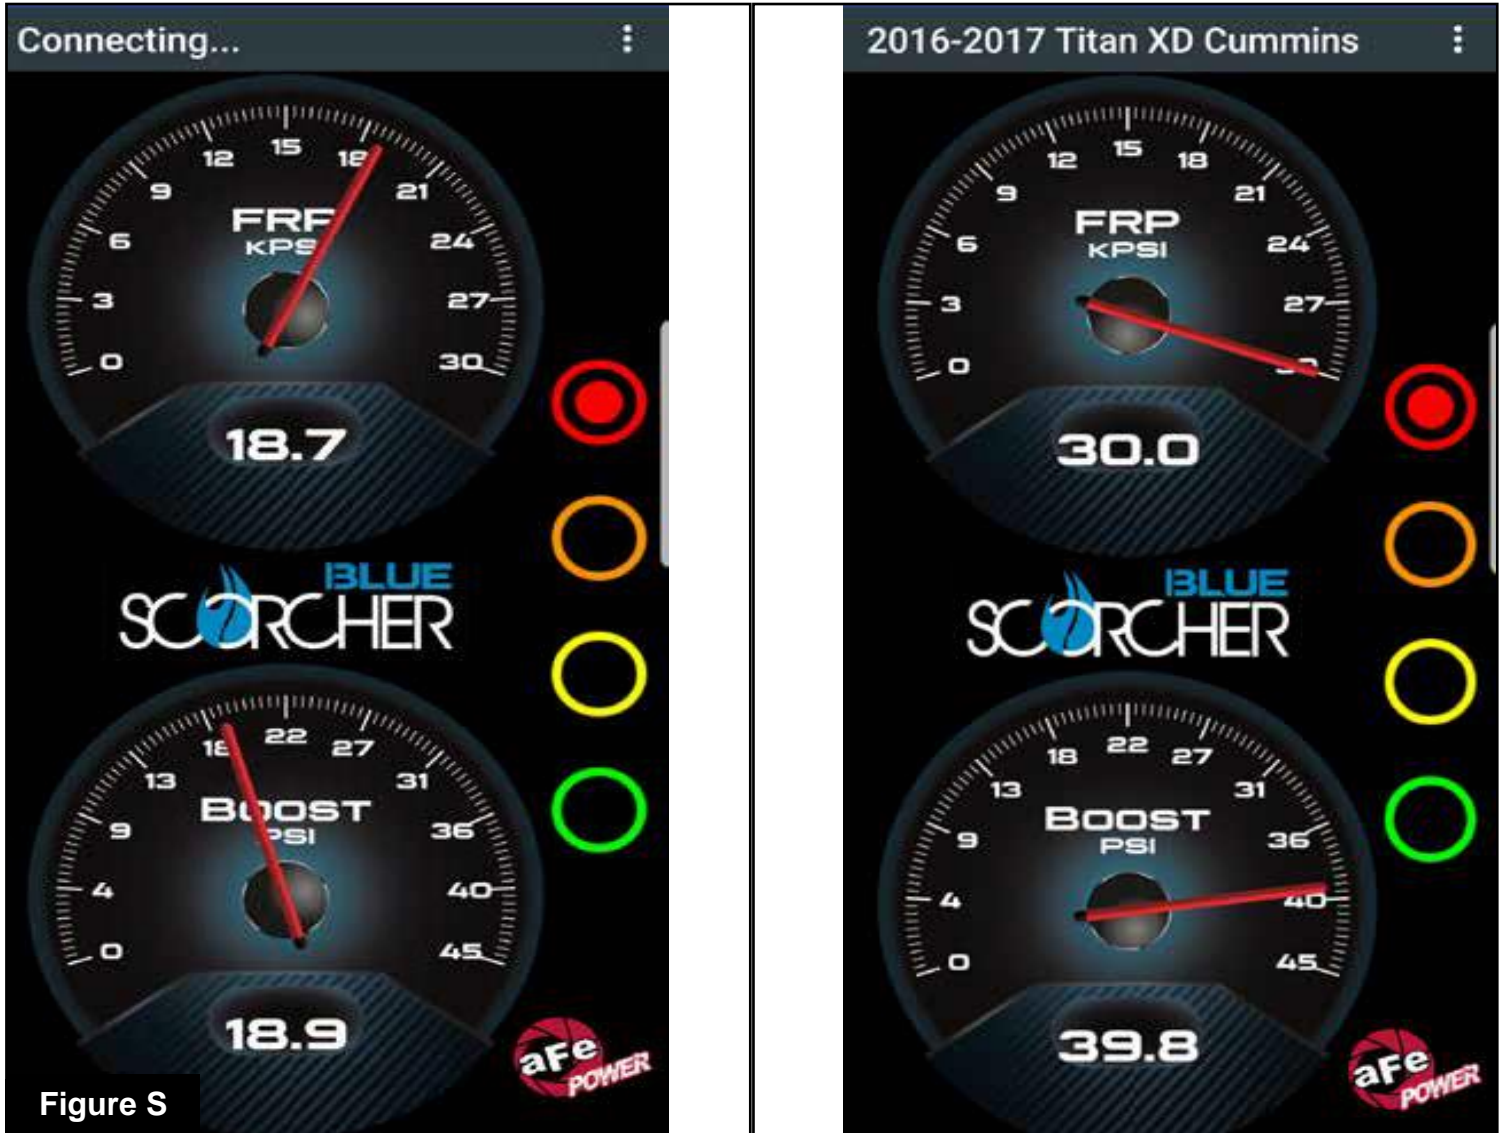


Figure S

**Refer to Figure S\* (app connection-iOS)**

For iOS devices, download the app from the apps store. Make sure the Bluetooth is activated on your device. Open the app and it will automatically connect through Bluetooth to the SCORCHER BLUE module when both the vehicle and module are on. When connected, the vehicle description will appear on top of the screen and the gauges will show current data.

The blue LED light on the module will become solid once connected to a Bluetooth device. Simply tap on the green, yellow, orange and red button to switch between the modes.

*\*Screen shots shown here are for example only. Actual screen display will vary depending on your vehicle.*

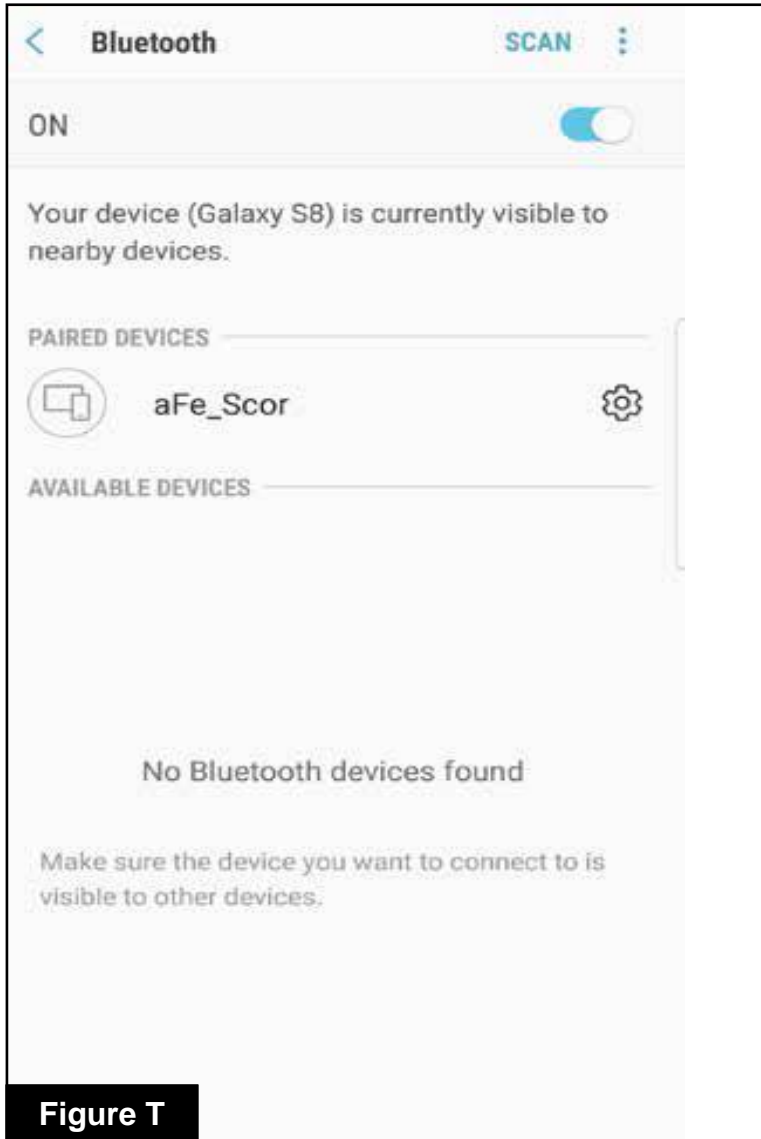



Figure T

**Refer to Figure T\* (app connection-Android)**

For Android devices, download the app from the play store. For the initial connection, go to the Bluetooth settings of your device, turn on Bluetooth and scan for available devices. Select “aFe SCOR” and pair with device. The vehicle needs to be on and the module connected. Once shown as paired device, open the app on your device and it will automatically connect to the vehicle. The vehicle description will appear on top of the screen and the gauges will show current data.

The blue LED light on the module will become solid once connected to a Bluetooth device. Simply tap on the green, yellow, orange and red button to switch between the modes.

*\*Screen shots shown here are for example only. Actual screen display will vary depending on your vehicle.*

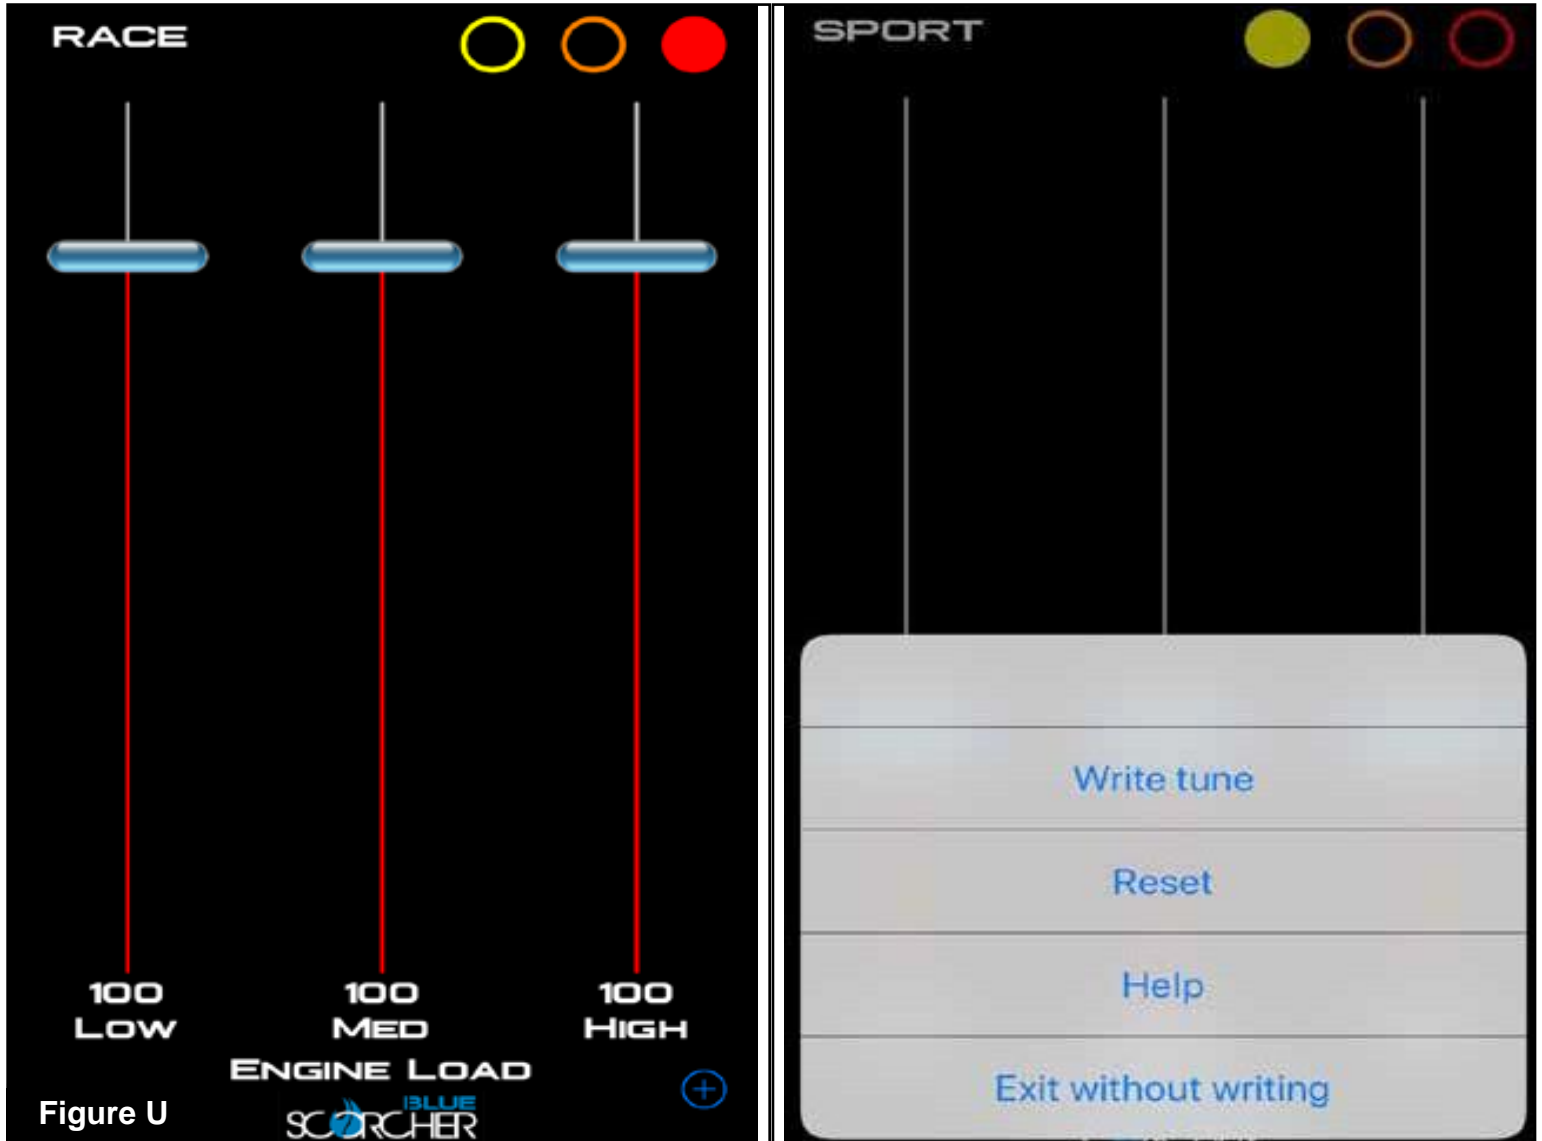

### Refer to Figure U (Custom Tuning)

The aFe POWER SCORCHER BLUE app offers the capability to custom tune the different modes. Go to the menu on the top right corner and select “Tune”. Select the mode you would like to custom tune and adjust the sliders at low, medium, and high load. You can either write the tune, reset, or exit without writing.



**Disclaimer:** Custom tuning should only be performed with the ignition in the “run” position and engine off. Configuring the tunes outside the default values may cause drivability issues and /or check engine lights to occur.





Figure V

### Refer to Figure V (Vehicle Performance Screen)

On the gauges screen, swipe to the left to get to the vehicle performance screen.

When the vehicle is not moving, select the test you are wanting to attempt (0-60mph, ¼ mile or mile). The app will automatically detect the movement of the vehicle and the timer will start. Once you reach the speed or distance, the timer will stop.

If you select a new mode, it will reset, and you can start again. If you need to stop the test at any point, hit the cancel button and leave the screen.

 Use the aFe POWER SCORCHER BLUE app responsibly. Always drive safely and obey traffic laws. aFe POWER is not responsible for any accidents, injuries, or property damage that may occur during its use.



**Figure W**

### **Refer to Figure W (Bypass Plug)**

A bypass plug is included in the kit. The plug can be connected to the harness instead of the module. This bypass plug will need to be used when the vehicle needs to be jump-started, or when there is an issue with the drivability of the vehicle. Once the bypass plug is connected, the vehicle will run in factory settings. Make sure the plug is fully engaged when connected to the harness. Thank you for choosing aFe POWER!



**The vehicle needs to be in sleep mode when the module gets disconnected and the bypass plug connected. Wait for the blue LED on the module to stop flashing to make sure the vehicle is in sleep mode.**



**Page left blank intentionally.**



***advanced FLOW engineering, inc.***

252 Granite Street Corona, CA 92879

<https://afepower.com/contact>